

10810 W LITTLE YORK RD #130 HOUSTON TX 77041-4051 VOICE (713) 973-6905 FAX (713) 973-9352 web: www.twrlighting.com

# IMPORTANT!!!

PLEASE TAKE THE TIME TO FILL OUT THIS FORM COMPLETELY. FILE IT IN A SAFE PLACE. IN THE EVENT YOU EXPERIENCE PROBLEMS WITH OR HAVE QUESTIONS CONCERNING YOUR CONTROLLER, THE FOLLOWING INFORMATION IS NECESSARY TO OBTAIN PROPER SERVICE AND PARTS.

MODEL #	AA2/3MDFMLED
SERIAL #	

PURCHASE DATE

PURCHASED FROM

# TWR Lighting," Inc. WARK Enlightened Technology®

## **AA2/3MDFMLED CONTROLLER**

### TABLE OF CONTENTS

1.0	GEN	VERAL INFORMATION	1
2.0	INST	FALLATION INSTRUCTIONS	2
	2.1	MOUNTING THE CONTROL CABINET	
	2.2	EXTERNAL PHOTOCELL WIRING	
	2.3	POWER WIRING	
	2.4	LED BEACONS AND LED SIDELIGHTS WIRING	
	2.5	LED BEACONS AND LED SIDELIGHTS ALARM WIRING	4
3.0	THE	CORY OF OPERATION	6
	3.1	POWER SUPPLY	6
	3.2	LED SIDELIGHTS	6
	3.3	LED BEACONS	6
4.0	MAI	INTENANCE	7
	4.1	RED OBSTRUCTION LIGHTING	7
	4.2	L-864 LED BEACON REPLACEMENT	7
	4.3	L-864 CONTROLLER	7
	4.4	PHOTOCELL	
5.0	MAJ	JOR COMPONENTS PARTS LIST	8
6.0	SUG	GESTED SPARE PARTS LIST	9

#### WARRANTY & RETURN POLICY

#### **RETURN MERCHANDISE AUTHORIZATION (RMA) FORM**

# TWR Lighting,<sup>®</sup> Inc. WSRK Enlightened Technology<sup>®</sup>

## AA2/3MDFMLED CONTROLLER

## APPENDIX

CHASSIS COMPONENT LAYOUT	
SCHEMATIC LAYOUT	
PHOTOCELL HOUSING DETAIL	100239 (REV H)
LED SIDELIGHT/LEDBEACON CURRENT SENSOR RELAY	101088 (REV B)
LED BEACON2 ASSEMBLY	100761 (REV C)
OL1VLED2 (L810 SINGLE OBSTRUCTION LIGHT)	100656 (REV E)
JUNCTION AND STRAIN RELIEF BOXES	100089 (REV A)
WRAPLOCK FASTENING DETAIL	100984



#### 1.0 GENERAL INFORMATION

The TWR Lighting<sup>®</sup>, Inc. (TWR<sup>®</sup>,) Model AA2/3MDFMLED, Controller is for A2 lighting of towers 351' to 700' above ground level (AGL) in accordance with the FAA Advisory Circular 70/7460-1K. One (1) LED beacon should be placed at the top and two (2) LED beacons at mid-level. Obstruction lights should be placed at the <sup>3</sup>/<sub>4</sub> and <sup>1</sup>/<sub>4</sub> intervals with respect to overall tower height.

The flash rate of the LED beacons is 30 per minute. The LED beacons flash synchronized to one another. The LED sidelights burn steady.

A by-pass switch, SW1, allows the controller to be turned on during daylight hours without covering the photocell. This is particularly helpful since the controller can be mounted indoors while the photocell is outdoors. SW1 can be operated by turning the switch to the "On" position.

The photocell is the three (3) blade twist to lock type.

Power supplied to the controller shall be 120V AC single phase.

The controller housing is rated at NEMA 4X. It is suitable for indoor or outdoor mounting.

Controller functions that are monitored by remote alarms in the form of dry contact closures (Form C) are as follows:

- **LED BEACONS** Will give an alarm in the event any of the LED beacons fail, along with visual indicator for that cicuit.
- **OBSTRUCTION LIGHTS** Will give an alarm when one (1) of three (3) LED sidelights fails.



#### 2.0 INSTALLATION INSTRUCTIONS

#### 2.1 <u>MOUNTING THE CONTROL CABINET</u> (Refer to Drawing 1320-R)

The power supply control cabinet can be located at the base of the structure or in an equipment building. Mounting footprints are shown on drawing 1320-R. Power wiring to the control cabinet should be in accordance with local methods and National Electrical Codes (NEC).

- 2.1.1 If the control cabinet is mounted inside an equipment building, the photocell should be mounted vertically on <sup>1</sup>/<sub>2</sub>" conduit outside the building above the eaves facing north. Wiring from the photocell socket to the control cabinet should consist of one (1) each, red, black, and white wires. The white wire is connected to the socket terminal marked "N," the black wire is connected to the socket terminal marked "Li," and the red wire is connected to the socket terminal marked "Lo." Care must be taken to assure that the photocell does not "see" any ambient light that would prevent it from switching into the nightmode.
- 2.1.2 If the control cabinet is mounted outside an equipment building, the photocell should be mounted vertically on  $\frac{1}{2}$ " conduit so the photocell is above the control cabinet. As above, the photocell should be positioned so that it does not "see" ambient light, which would prevent it from switching to the nightmode. The photocell wiring is the same as in 2.1.1.
- 2.1.3 The wiring from the photocell, the service breaker, the red LED beacons, and the LED sidelights should enter the control cabinet through the watertight connectors in the bottom of the cabinet. Inside the cabinet, the connections will be made on the terminal strips and circuit breakers located at the bottom of the chassis. These connections are made as follows:

#### 2.2 <u>EXTERNAL PHOTOCELL WIRING</u> (Refer to Drawing 1320-R)

2.2.1 Connect the **<u>BLACK</u>** wire from the photocell to terminal block TB2 marked "L."



- 2.2.2 Connect the **<u>RED</u>** wire from the photocell to terminal block TB2 marked "SSR."
- 2.2.3 Connect the <u>WHITE</u> wire from the photocell to terminal block TB2 marked "N."

#### 2.3 **POWER WIRING**

(Refer to Drawing 1320-R)

- 2.3.1 Power wiring to the control cabinet should be in accordance with local methods and National Electrical Codes.
- 2.3.2 Circuit breaker needs to be a one (1) pole common trip rated at 10 amps.
- 2.3.3 Connect incoming 120V AC "Hot" to terminal block TB1 marked "L."
- 2.3.4 Connect the neutral wire(s) to one (1) of the terminal blocks on TB1 marked "N."
- 2.3.5 Connect the AC ground to the copper ground lug to the right.

#### 2.4 LED BEACONS AND LED SIDELIGHTS WIRING

(Refer to Drawings 1320-R)

- 2.4.1 Connect the "Hot" wire from LED Beacon #1 to the circuit breaker marked "B1."
- 2.4.2 Connect the "Hot" wire from LED Beacon #2 to the circuit breaker marked "B2."
- 2.4.3 Connect the "Hot" wire from LED Beacon #3 to the circuit breaker marked "B3."
- 2.4.4 Connect the "Hot" wire from LED sidelight group #1 to the circuit breaker marked "S1."
- 2.4.5 Connect the "Hot" wire from LED sidelight group #2 to the circuit breaker marked "S2."



- 2.4.6 Connect the <u>WHITE</u> neutral wire(s) to one (1) or more of the terminals market "N."
- 2.4.7 Connect the ground wires to the ground lug located to the right of "TB2."

#### 2.5 <u>LED BEACONS AND LED SIDELIGHTS ALARM WIRING</u> (Refer to Drawings 1320-R and 1320-S)

- 2.5.1 Alarm Modules M1-M5, are provided for independent contact closures for: B1 Burnout, B2 Burnout, B3 Burnout, S1 Lamp Burnout, and S2 Lamp Burnout.
- 2.5.2 Alarm Wiring: To utilize all of the red light alarms, the customer will need five (5) pairs of wires to interface with his alarm device. One (1) wire from each of the five (5) pairs will terminate at the points marking common (C). The remaining wire from each pair will terminate as follows:

B1 Burnout:	Connect to module M3, terminal #24, for normally open (OR) terminal #22, for normally closed monitoring.
B2 Burnout:	Connect to module M4, terminal #24, for normally open (OR) terminal #22, for normally closed monitoring.
B3 Burnout:	Connect to module M5, terminal #24, for normally open (OR) terminal #22, for normally closed monitoring.
S1 Lamp Burnout:	Connect to module M1, terminal #24, for normally open (OR) terminal #22, for normally closed monitoring.
S2 Lamp Burnout:	Connect to module M2, terminal #24, for normally open (OR) terminal #22, for normally closed monitoring.



2.5.3 Alarm Testing: To test alarms, follow the procedures using an "ohm" meter between alarm common and alarm points.

#### LED Beacons and LED Sidelights:

Trip breakers on the controller panel.



#### 3.0 THEORY OF OPERATION

#### 3.1 <u>POWER SUPPLY</u>

120V AC enters the controller from the circuit breaker panel. Line "L" sits at the PRD, waiting to be switched. When the 6390-FAA photocell is activated, Line "SSR" energizes the coil of the PRD. This also can be accomplished by using the photocell by-pass switch (SW1).

#### 3.2 <u>LED SIDELIGHTS</u>

Line LDS is sent to Modules M1 and M2, which are current sensing modules for LED sidelights. Each RM22JA31MRSP01 monitors one (1) level of LED sidelights, and will provide a contact closure along a visual indication if one (1) or more lamps fail.

#### 3.3 <u>LED BEACONS</u>

Line LDB is sent to the coil of the 22-02 motor flasher and to Modules M3, M4, and M5. The 22-02 motor is the flasher for all of the LED beacons. The output of this motor is sent through the current sensing Modules M3, M4, and M5, then to the circuit breaker outputs B1-B3. If Modules M3, M4, or M5, detect an LED beacon burnout, then that particular module would provide a contact closure along with a visual indication for that circuit.

# TWR Lighting,<sup>®</sup> Inc. WARK Enlightened Technology<sup>®</sup>

## AA2/3MDFMLED CONTROLLER

#### 4.0 MAINTENANCE

#### 4.1 <u>RED OBSTRUCTION LIGHTING</u>

No scheduled maintenance is required. Perform on an "as needed" basis only.

TOOLS REQUIRED: NONE

#### 4.2 <u>L-864 LED BEACON REPLACEMENT</u>

No scheduled maintenance is required. Perform on an "as needed" basis only.

#### 4.3 <u>L-864 CONTROLLER</u>

No scheduled maintenance is required. Perform on an "as needed" basis only.

#### 4.4 <u>PHOTOCELL</u>

The photocell is a sealed unit. No maintenance is needed or required other than replacement as necessary.

# TWR Lighting,<sup>®</sup> Inc. WARK Enlightened Technology<sup>®</sup>

## **AA2/3MDFMLED CONTROLLER**

### 5.0 MAJOR COMPONENTS PARTS LIST

QTY	PART NUMBER	DESCRIPTION
1	6390-FAA (This replaces the 102- FAA Photocell)	120 – 240V Photocell
1	PRD7AGO	Mechanical Load Contactor (PRD)
1	STJ01002	Switch (SW1)
1	VJ1412HWPL2X004	Enclosure
7	8WA1204	Terminal Block (TB1 & TB2)
2	8WA1802	Rail Link
2	8WA1808	Terminal Block End Stop
5	S261D2	2 amp Circuit Breaker (B2-B3)
5	RM22JA31MRSP01	LED Sidelight Current Sensors (M1, and M2), and LED Beacon Current Sensors (M3, M4, and M5)
1	22-02	Motor Driven Flasher

# TWR Lighting,<sup>®</sup> Inc. WARK Enlightened Technology<sup>®</sup>

## **AA2/3MDFMLED CONTROLLER**

### 6.0 SUGGESTED SPARE PARTS LIST

QTY	PART NUMBER	DESCRIPTION
1	6390-FAA (This replaces the 102- FAA Photocell)	120 – 240V Photocell
1	RM22JA31MRSP01	LED Sidelight Current Sensors (M1, and M2), and LED Beacon Current Sensors (M3, M4, and M5)



#### Warranty & Return Policy

**TWR Lighting<sup>®</sup>**, **Inc. ("TWR<sup>®</sup>") warrants its products (other than "LED Product")** against defects in design, material (excluding incandescent bulbs) and workmanship for a period ending on the earlier of two (2) years from the date of shipment or one (1) year from the date of installation.

**TWR Lighting®**, **Inc.** ("**TWR®**") **warrants its "LED Product**" against defects in design, material and workmanship for a period of five (5) years from the date of shipment. TWR®, at its sole option, will, itself, or through others, repair, replace or refund the purchase price paid for "LED Product" that TWR® verifies as being inoperable due to original design, material, or workmanship. All warranty replacement "LED Product" is warranted only for the remainder of the original warranty of the "LED Product" replaced. Replacement "LED Product" will be equivalent in function, but not necessarily identical, to the replaced "LED Product."

**TWR Lighting<sup>®</sup>**, **Inc.** ("**TWR<sup>®</sup>**") **warrants its "LED Product**" against light degradation for a period of five (5) years from the date of installation. TWR<sup>®</sup>, at its sole option, will, itself, or through others, repair, replace, or refund the purchase price paid for "LED Product" that TWR<sup>®</sup> verifies as failing to meet 75% of the minimum intensity requirements as defined in the FAA Advisory Circular 150/5345-43G dated 09/26/12. All warranty replacement "LED Product" is warranted only for the remainder of the original warranty of the "LED Product" replaced. Replacement "LED Product" will be equivalent in function, but not necessarily identical, to the replaced "LED Product."

# **Replacement parts (other than "LED Product") are warranted for 90 days from the date of shipment.**

Conditions not covered by this Warranty, or which might void this Warranty are as follows:

- x Improper Installation or Operation
- x Misuse
- x Abuse
- x Unauthorized or Improper Repair or Alteration
- x Accident or Negligence in Use, Storage, Transportation, or Handling
- x Any Acts of God or Nature
- x Non-OEM Parts

The use of Non-OEM parts or modifications to original equipment design will void the manufacturer warranty and could invalidate the assurance of complying with FAA requirements as published in Advisory Circular 150/5345-43.



## Warranty & Return Policy

(continued)

**Field Service** – Labor, Travel, and Tower Climb are not covered under warranty. Customer shall be obligated to pay for all incurred charges. An extensive network of certified and insured Service Representatives is available if requested.

**Repair, Replacement or Product Return RMA Terms** – You must first contact our Customer Service Department at **713-973-6905** to acquire a Return Merchandise Authorization (RMA) number in order to return the product(s). Please have the following information available when requesting an RMA number:

- x The contact name and phone number of the tower owner or
- x The contact name and phone number of the contractor
- x The site name and number
- x The part number(s)
- x The serial number(s) (if any)
- x A description of the problem
- x The billing information
- x The Ship To address

This RMA number must be clearly visible on the outside of the box. If the RMA number is not clearly labeled on the outside of the box, your shipment will be refused. Please ensure the material you are returning is packaged carefully. The warranty is null and void if the product(s) are damaged in the return shipment.

# All RMAs must be received by TWR LIGHTING<sup>®</sup>, INC., 10810 W. LITTLE YORK RD., #130, HOUSTON, TX 77041-4051, within 30 days of issuance.

Upon full compliance with the Return Terms, TWR<sup>®</sup> will replace, repair and return, or credit product(s) returned by the customer. It is TWR<sup>®</sup>'s sole discretion to determine the disposition of the returned item(s).



#### Warranty & Return Policy (continued)

**<u>RMA Replacements</u>** – Replacement part(s) will be shipped and billed to the customer for product(s) considered as Warranty, pending return of defective product(s). When available, a certified reconditioned part is shipped as warranty replacement with a Return Merchandise Authorization (RMA) number attached. Upon receipt of returned product(s), inspection, testing, and evaluation will be performed to determine the cause of defect. The customer is then notified of the determination of the testing.

- x Product(s) that is deemed defective and/or unrepairable and covered under warranty a credit will be issued to the customer's account.
- x Product(s) found to have no defect will be subject to a **\$75.00 per hour testing charge (1 hour minimum), which will be invoiced to the customer.** At this time the customer may decide to have the tested part(s) returned and is responsible for the return charges.
- x Product(s) under warranty, which the customer does not wish returned, the customer will be issued a credit against the replacement invoice.

**<u>RMA Repair & Return</u>** – A Return Merchandise Authorization (RMA) will be issued for all part(s) returned to TWR<sup>®</sup> for repair. Upon receipt of returned product(s), inspection, testing, and evaluation will be performed to determine the cause of defect. The customer is then notified of the determination of the testing. If the returned part(s) is deemed unrepairable, or the returned part(s) is found to have no defect, the customer will be subject to a **\$75.00 per hour testing charge (1 hour minimum), which will be invoiced to the customer.** Should the returned parts be determined to be repairable, a written estimated cost of repair will be sent to the customer for their written approval prior to any work being performed. In order to have the tested part(s) repaired and/or returned, the customer must issue a purchase order and is responsible for the return shipping charges.

**<u>RMA Return to Stock</u>** – Any product order that is returned to TWR<sup>®</sup> for part(s) ordered incorrectly or found to be unneeded upon receipt by the customer, the customer may be required to pay a minimum **20% restocking fee**. Product returned for credit must be returned within 60-days of original purchase, be in new and resalable condition, and in original packaging. Once the product is received by TWR it's condition will be evaluated and a credit will be issued only once it is determined that the RMA Return Terms have been met.

<u>Credits</u> – Credits are issued once it is determined that all of the Warranty and Return Terms are met. All credits are processed on Fridays. In the event a Friday falls on a Holiday, the credit will be issued on the following Friday.



## Warranty & Return Policy

(continued)

**<u>Freight</u>** – All warranty replacement part(s) will be shipped via ground delivery and paid for by TWR<sup>®</sup>. Delivery other than ground is the responsibility of the customer.

REMEDIES UNDER THIS WARRANTY ARE LIMITED TO PROVISIONS OF REPLACEMENT PARTS AND REPAIRS AS SPECIFICALLY PROVIDED. IN NO EVENT SHALL TWR<sup>®</sup> BE LIABLE FOR ANY OTHER LOSSES, DAMAGES, COSTS, OR EXPENSES INCURRED BY THE CUSTOMER, INCLUDING, BUT NOT LIMITED TO, LOSS FROM FAILURE OF THE PRODUCT(S) TO OPERATE FOR ANY TIME, AND ALL OTHER DIRECT. INDIRECT. SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, INCLUDING ALL PERSONAL INJURY OR PROPERTY DAMAGE DUE TO ALLEGED NEGLIGENCE, OR ANY OTHER LEGAL THEORY WHATSOEVER. THIS MADE BY TWR® WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED. WITHOUT LIMITING THE TWR<sup>®</sup> MAKES GENERALITY OF THE FORGOING. NO WARRANTY OF MERCHANTABILITY OR FITNESS OF THE PRODUCT(S) FOR ANY PARTICULAR PURPOSE. TWR® EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES.




### **RETURN MERCHANDISE AUTHORIZATION (RMA) FORM**


RMA#:	DATE:	
	PHONE NO.:	
	PART NO.):	
	SERIAL NO.:	
ORIGINAL TWR INVO	DICE NO.:DATED:	
	OBLEM:	
	DATE NEEDED:	
<b>RETURN ADDRESS:</b>	TO: 10810 W. LITTLE YORK RD. #130 HOUSTON TX 77041-4	051





### **RETURN MERCHANDISE AUTHORIZATION (RMA) FORM**

RMA#:	DATE:
	PHONE NO.:
	(PART NO.):
	SERIAL NO.:
ORIGINAL TWR INVO	DICE NO.:DATED:
DESCRIPTION OF PR	OBLEM:
SIGNED:	DATE NEEDED:
<b>RETURN ADDRESS:</b> PLEASE RETURN PRODUC	T TO: 10810 W. LITTLE YORK RD. #130 HOUSTON TX 77041-4051

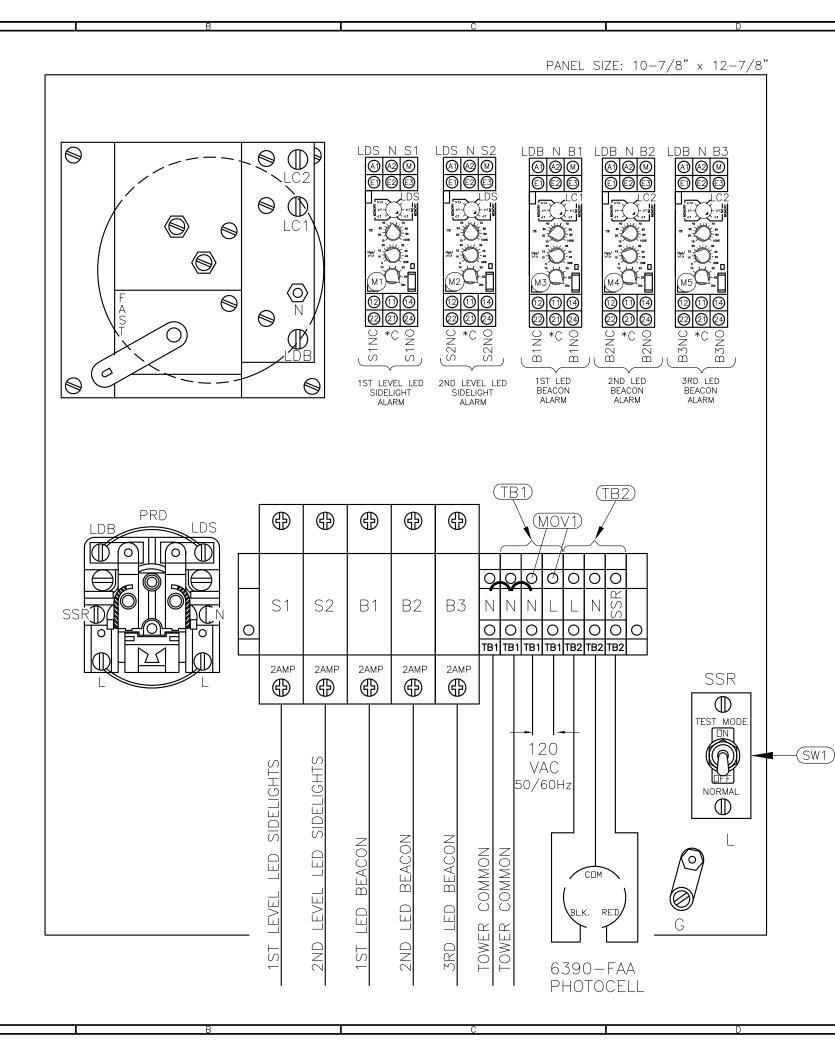

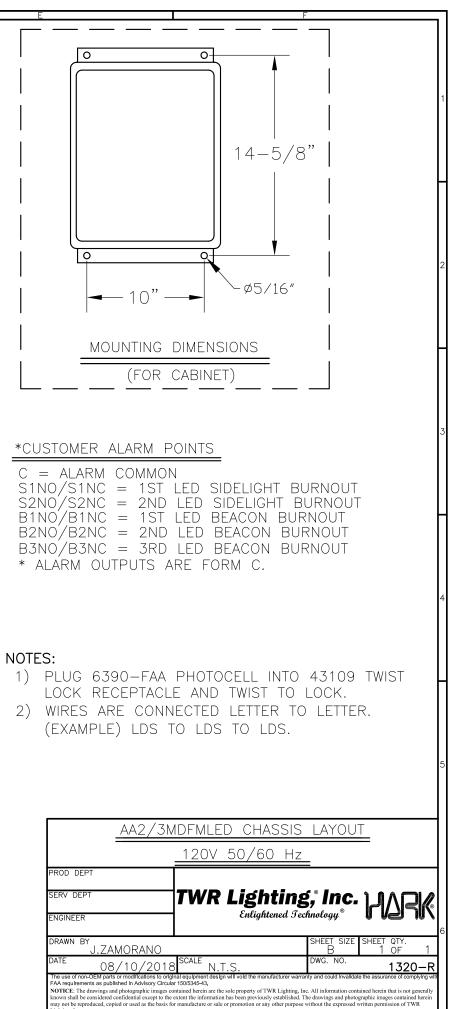

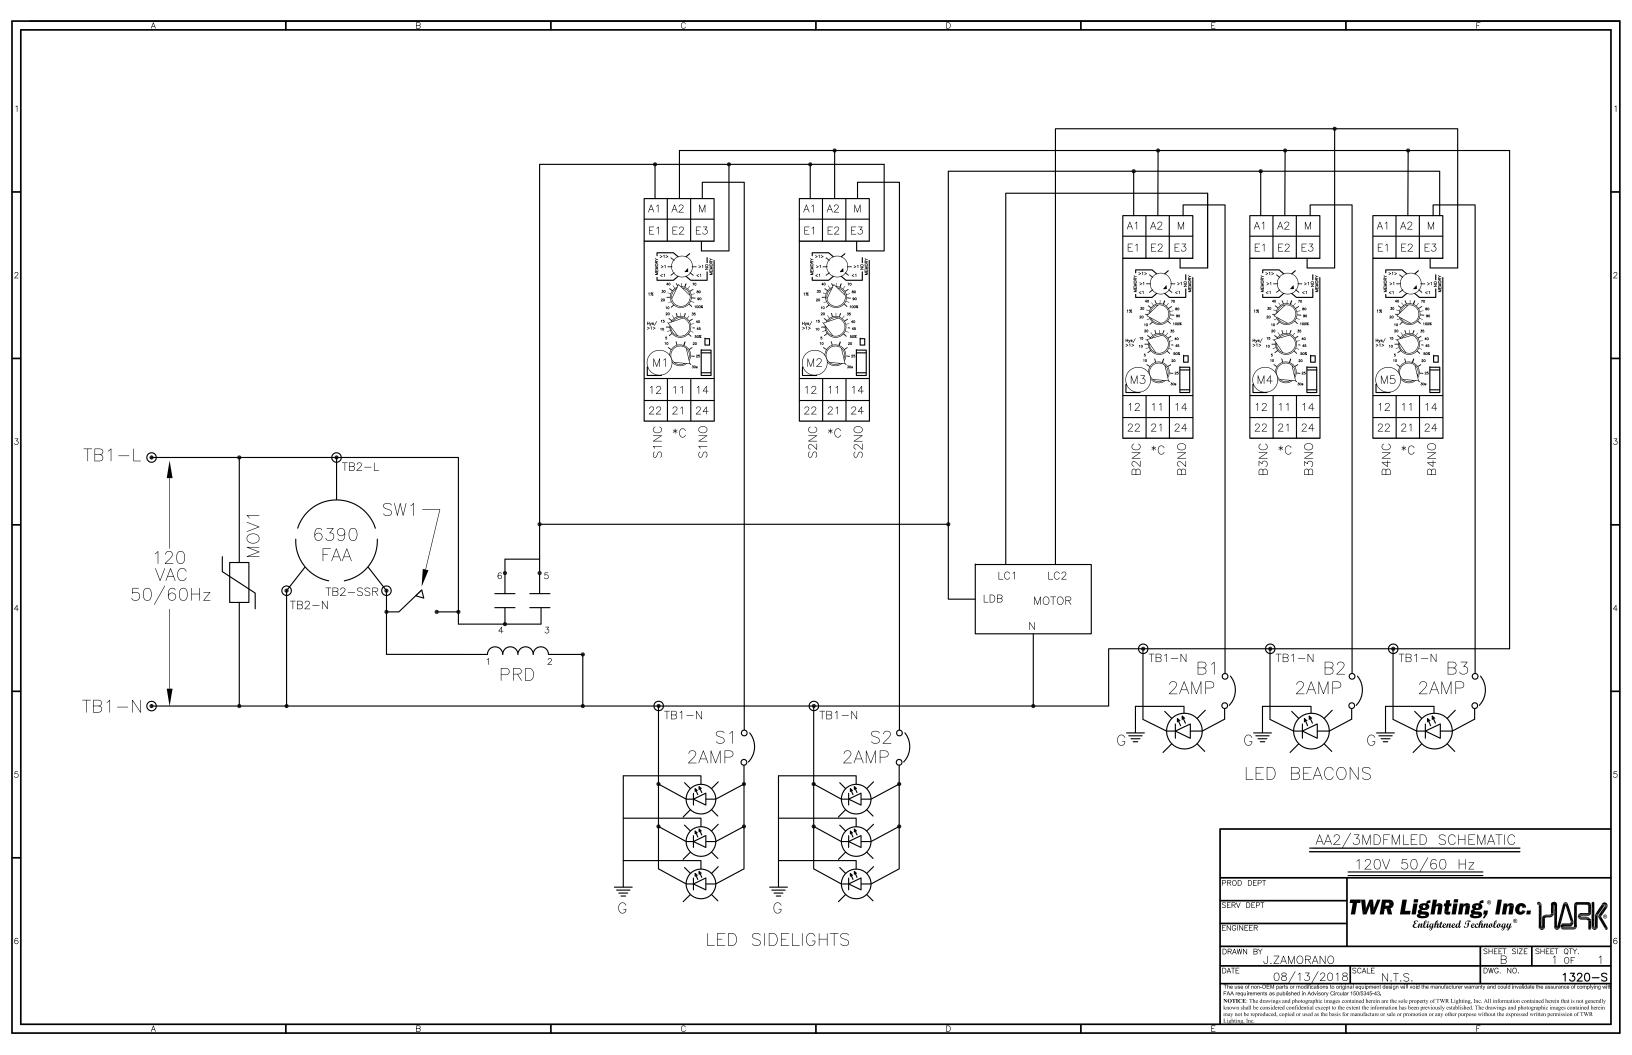

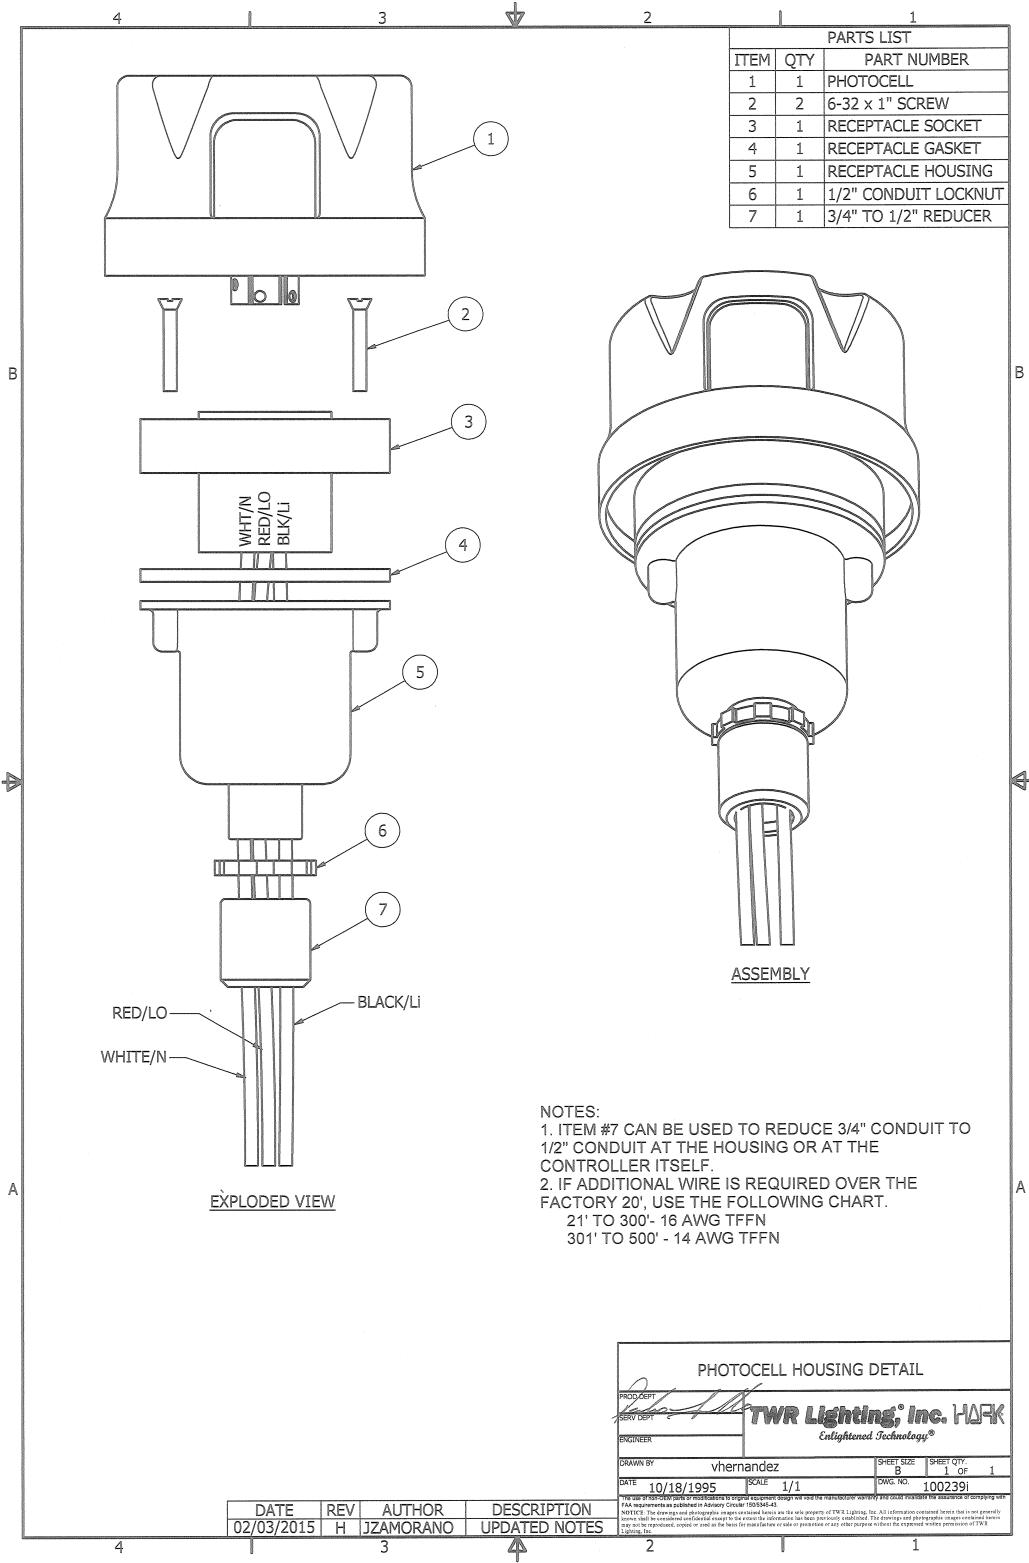

## AC UNITS CURRENT MEASUREMENT RM22JA31MRSP01

CONTROL VOLTAGE INPUT-

120VAC PRODUCT SPECIFIC SETTINGS									
QTY.	PART NO.	INPUT	#1	#2	#3	#4	<b>#</b> 5		
1	OL1_LED2	E2	*<1	30	20	30	OFF		
2	OL1_LED2	E2	*<1	50	20	30	OFF		
3	OL1_LED2	E3	*<1	15	20	30	OFF		
4	OL1_LED2	E3	*<1	25	20	30	OFF		
6	OL1_LED2	E3	*<1	35	20	30	OFF		
8	OL1_LED2	E3	*<1	45	15	30	OFF		
10	OL1_LED2	E3	*<1	60	10	30	OFF		
1	LEDBEACON2	E3	*<1	20	20	30	OFF		
1	LEDBEACON2A	E3	*<1	15	20	30	OFF		
1	LEDBEACON2(T)	E3	*<1	25	20	30	OFF		
1	STLDBEACON2	E3	*<1	20	20	30	OFF		
1	STLDBEACON2A	E3	*<1	15	20	30	OFF		
2	STLDBEACON2A	E3	*<1	25	20	30	OFF		
2	STLDBEACON2A	E3	*<1	25	20	30	OFF		

\*NO MEMORY

#### FUNCTIONS

1) Configuration: Selection of operation mode

(<1 / >1 / >1 <) with or without memory.

2) Adjustment of current threshold as % of setting range.

3) Hysteresis adjustment from 5% to 50%.

4) Time Delay adjustment from 0.1 to 30sec.

5) Diagnostic button.

6) Yellow indicator light (See conditions below)

7) Dial Pointer (Green) LED

- Steady green LED indicates that supply to the RM22 is present
- Flashing green LED indicates a setting has been changed that requires a power cycle.

#### YELLOW LED CONDITIONS

## NOTE: () ASTERISK INDICATES LED CONDITIONS OPERATE OPPOSITE FROM RM22JA31MR MODULE

**Steady Burn Fixtures** 


- Yellow light \*off : Normal condition (no alarm)
- Yellow light flashing : Undercurrent condition detected and time delay initiated
- Yellow light \*on : Alarm condition

**Flashing Fixtures** 

- Yellow light flashing inconsistent : Normal condition (no alarm)
- Yellow light flashing consistent : Under current condition detected and time delay initiated

**NOTE :** To help troubleshoot or to set the sense current, turn the time delay to 0<sub>sec</sub>. Adjusting the current setting should only be done if it is known that all the lights are functioning. For Steady Burn adjust the current until the yellow LED comes \*off, and the relay is not dropping in and out. For Flashing Fixtures adjust the current setting until the yellow light starts to flash. This is the normal condition setting. Return the time delay back to 30<sub>sec</sub>.

• Yellow light \*on : Alarm condition

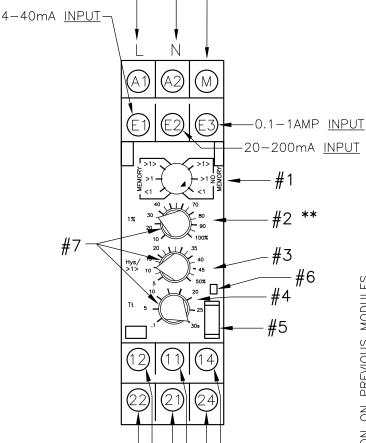


NC

С


NC

OUTPUT TO LOAD

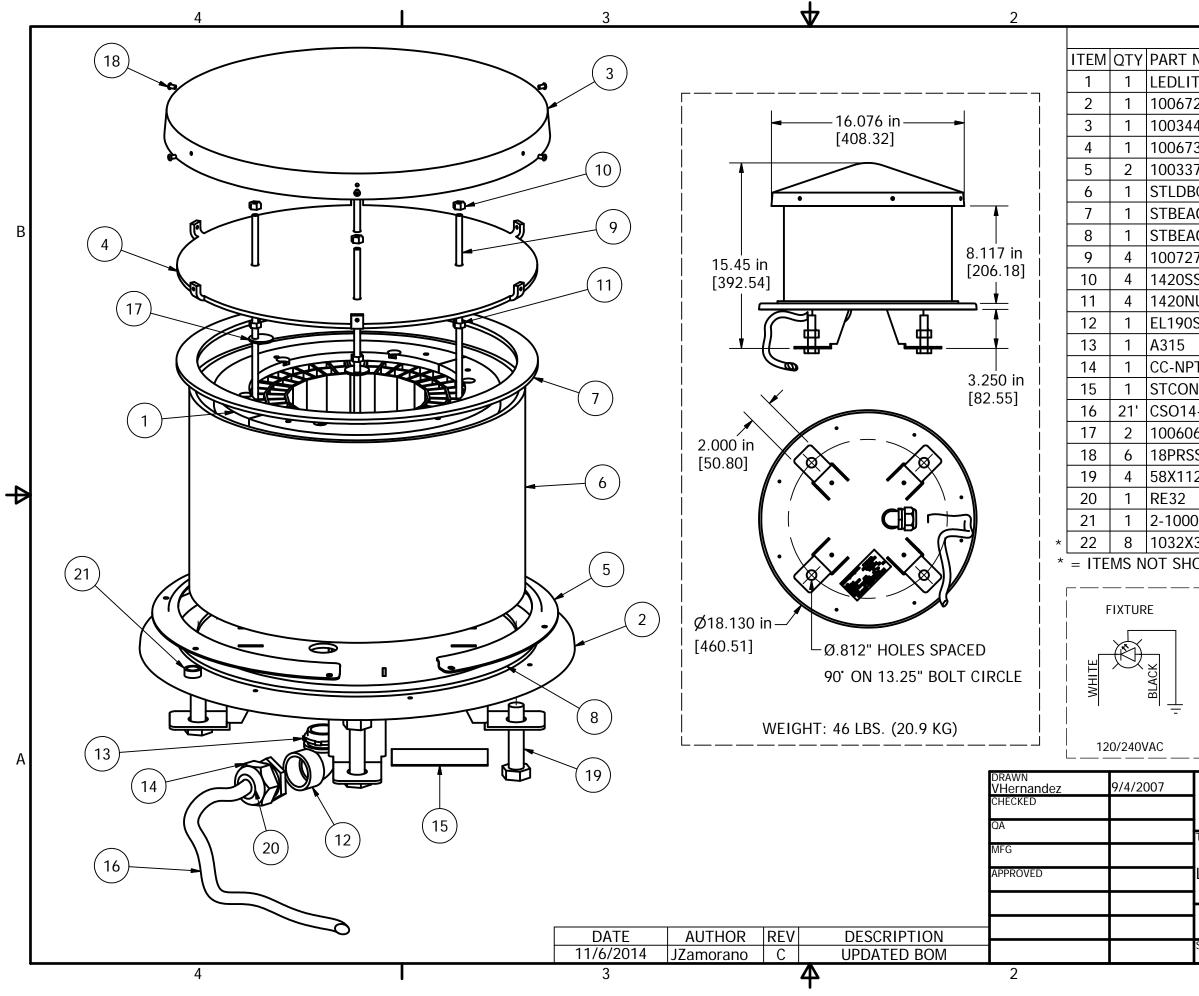

1	1	
	Parts List	
NUMBER	DESCRIPTION	
TEENG2	ORGA L-864 LED LIGHT ENGINE 120/240V	AC
2	LEDBEACON BASE PLATE	
4	CAP DUAL BEACON	
/3	LEDBEACON LID PLATE	
37	LENS RETAINER RING	
BCTUBE2	CLEAR ACRYLIC TUBE	
AGSK4	GASKET NEOPRENE 13 1/8 X 15 OD X	
AGSKT	GASKET NEOPRENE 13 1/4 x 15	В
27	14-20 X 9.875" DE 304 S.S. ORG	
SNUTN	1/4-20 NUT W/NYLON INSERT 304	
IUT	1/4-20 NUT 304 S/S	
)S	1" 90 DEGREE SHORT ELBOW GALV.	
	1" CONDUIT LOCKNUT GALV.	
PT34-G	3/4" NPT CORD CONNECTOR .500"	
NLAB2	100223 PRODUCT LABEL	
4-3	S.O. CORD 14AWG/3 CONDUCTOR	
)6M	LED LIGHT ENGINE TIE DOWN WASH	
SS-2	1/8 X .400 SS POP RIVET #44	
2	5/8 X 1-1/2 HEX BOLT	
	1" TO 3/4" REDUCER, GALV.	₩
00	CIRCULAR SPIRIT LEVEL	
(38PHW	10-32X3/8 PHILLS HD CAPTIVE SCREW	
IOWN		
CONN TO PF POWE FAILU VOID WARF	RANTIES.	A
TITLE LEDBEAC	VR Lighting," Inc. WARK Enlightened Technology®	
SIZE B		rev C
SCALE 1/	100761	<u> </u>
	4 sheet 1 of 1 1	
I	I	

4	3	4			2	1	-
					1	Parts List	
		ļ	ITEM	QTY	PART NUMBER		
			1	1	OL1VLED2	L810 OBSTRUCTION LIGHT	
		*	1.1	1	100588_RE	OL 6LED BASE PLATE	]
		*	1.2	1	100591	OL 6LED STAR DISK	]
		*	1.3	1	100680	OL1/2 SERIAL # LABEL	1
		*	1.4	1	A10290	5/32" ID RUBBER GROMMET	1
		*	1.5		STD05008	LED EMITTER	1
		*	1.6	1	OLG	OL GASKET	1
		*	1.7	1	AP100846	SIDELIGHT LENS CLEAR ACYRLIC	
		*	1.8	1	106V	LENS HOLDER RING	
		*	1.9	6	STE01-047	LED VERTICAL PCB	
		*	1.10		18PRSS	1/8 X .45 SS POP RIVET	
1	/ -	*	1.10		PS90-260/24	POWER SUPPLY	1
	/	*	1.11		20RED	#20AWG RED BELDON WIRE	$\mathbf{I}$
							-
		*	1.13			BLUE WIRE NUT	В
//			2	2	HC255SS	SIDELIGHT LATCH	-
			3	1	7X7SS	1/16 HOL 7X7 S.S. WIRE	
Λ (	J N		4	2	12V245	OL LENS CLIP	
			5	1	105V	SINGLE SIDELIGHT BODY	
			6		832X14PH	8-32 X 1/4 PH SS SLOT SCREW	
			7	2	A1A	STAKON CRIMP	
			8	1	A314	3/4" CONDUIT LOCKNUT GALV.	
			* =	ITFM	S NOT SHOWN		
			$\begin{pmatrix} 7 \\ 6 \\ 3 \\ 4 \\ 5 \\ 8 \end{pmatrix}$			7.342 7.342 5.30 FIXTURE	
					WHITE		A

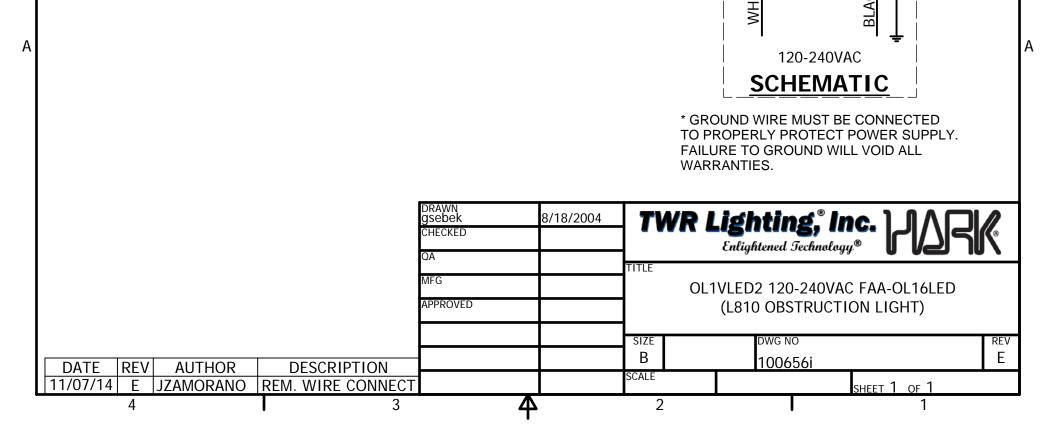

Α		В		C	D	<u>E</u>
3	JB-5 AND 3/4" JUNCTION					ND JB-8SR Iction box
using this .	JUNCTION BOX METI	HOD SPACING	IS 100 FEET		2) THE NATION	THIS METHOD Al electrica
		RES IN 1"	WIRE AREA SQ. INCHES	WEIGHT PER 100 FEET	SUPPORTED Connection 3) Sketch illi	
5 12 THHN 10 THHN 8 THHN 6 THHN 4 THHN		26 17 9 7 4	0.0117 0.0184 0.0373 0.0519 0.0845		BE GROUPEI 4) CONDUCTOR	D TOGETHER.
6						Ĩ

	9/29/00	A) ä	UPDATED NOTES
	DATE:	LTR.	REVISION
0		-	

