

4300 WINDFERN RD. #100 - HOUSTON TX 77041-8943 VOICE (713) 973-6905 - FAX (713) 973-9352 web: www.twrlighting.com

IMPORTANT!!!

PLEASE TAKE THE TIME TO FILL OUT FORM COMPLETELY. FILE IT IN A SAFE PLACE. IN THE EVENT YOU EXPERIENCE PROBLEMS WITH OR HAVE QUESTIONS CONCERNING YOUR CONTROLLER, THE FOLLOWING INFORMATION IS NECESSARY TO OBTAIN PROPER SERVICE AND PARTS.

MODEL #	A1/3MBNM7W/IND
SERIAL #	
PURCHASE DATE	
PURCHASED FROM	

TWR Lighting, Inc. Enlightened Technology®

TABLE OF CONTENTS

1.0	<u>GEN</u>	IERAL INFORMATION1	l
2.0	INST	FALLATION INSTRUCTIONS 2	2
	2.1	MOUNTING THE CONTROL CABINET	2
	2.2	EXTERNAL PHOTOCELL WIRING2	2
	2.3	POWER WIRING	
	2.4	RED BEACON AND SIDELIGHT WIRING	3
	2.5	RED BEACON AND SIDELIGHT ALARM WIRING	3
3.0	THE	ORY OF OPERATION	5
	3.1	POWER SUPPLY	
	3.2	SIDELIGHTS	5
	3.3	BEACONS	5
4.0	MAI	NTENANCE GUIDE	5
	4.1	RED OSTRUCTION LIGHTING	5
	4.2	L-864 LAMP REPLACEMENT	5
	4.3	L-810 LAMP REPLACEMENT	5
	4.4	L-864 CONTROLLER	5
	4.5	PHOTOCELL	5
5.0	MAJ	OR COMPONENTS PARTS LIST	
6.0	REC	OMMENDED SPARE PARTS LIST	

- 7.0 WARRANTY & RETURN POLICY
- 8.0 RETURN MERCHANDISE AUTHORIZATION (RMA) FORMS

TWR Lighting, Inc. Enlightened Technology® A1/3MBNM7W/IND CONTROLLER

APPENDIX

CHASIS COMPONENT LAYOUT	1288-R
SCHEMATIC LAYOUT	1288-S
PHOTOCELL HOUSING DETAIL	100239 (REV E)
L-864 300 MM BEACON	FM10017 (REV B)
L-864 300 MM BEACON ASSEMBLY DETAIL	275-B (REV D)
L-810 OL1 SINGLE OBSTRUCTION LIGHT DETAIL	FM10018 (REV C)
L-810 OL1 ASSEMBLY DETAIL	279-OL (REV B)
L-810 OL1 WIRING DETAIL	274-S (REV A)
JUNCTION BOX DETAIL	100089 (REV A)
A1/3 TOWER LIGHTING KIT	T1550

TWR Lighting, Inc. Enlightened Technology® A1/3MBNM7W/IND CONTROLLER

1.0 GENERAL INFORMATION

The TWR Lighting[®], Inc. (TWR[®]) Model A1/3MBNM7W/IND Controller is for stack lighting in accordance with the FAA A/C 70/7460-1K. Three (3) beacons should be placed at the top of the structure. Obstruction lights should be placed at the 1/2 interval, with respect to overall structure height.

The flash rate of the beacons is 30 per minute. The beacons flash synchronized to one another. The sidelights burn steady.

A by-pass switch (SW1), on the front of the door, allows the controller to be turned on during daylight hours without covering the photocell. SW1 can be operated by turning the switch to the "ON" position. Also, PL1 indicator will illuminate.

Each beacon requires two (2) 620 watt, 120V bulbs. TWR® recommends that you use only these bulbs. The use of any other bulb may give a false beacon lamp burnout alarm. Do not try to use 130V bulbs. Each sidelight requires (1) 116 watt, 120V bulb. (620PS40P and 116A21TS)

Power supplied to controller shall be 120V AC 60 Hz.

<u>NOTE</u>: The enclosure provided is for Class I, Class II, Div. I & II, Groups B, C, D, E, F, and G; as well as Class III, per NEC for hazardous locations (Article 501).

Controller functions that are monitored by remote alarms in the form of dry contact closures are as follows:

POWER FAILURE	Monitors 120V AC to the controller. Alarms in the event of power failure, or tripped circuit breaker.
LIGHTS "ON"	Gives an indication whenever the controller is activated. Also, PL1 indicator will illuminate green.
BEACONS	Will give an alarm in the event of one (1) or both bulbs failing within any beacon, and PL2 indicator will illuminate <u>red</u> .
OBSTRUCTION LIGHTS	Will give an alarm when one (1) of the three (3) sidelights fails within that level. Also, PL3 indicator will illuminate <u>red</u> .

TWR Lighting, Inc. Enlightened Technology®

2.0 INSTALLATION INSTRUCTIONS

2.1 <u>MOUNTING THE CONTROL CABINET</u> (Refer to Drawing 1288-R)

- **2.1.1** The power supply control cabinet can be located at the base of the structure. Mounting footprints are shown on drawing 1288-R. Power wiring to the control cabinet should be in accordance with local methods and National Electrical Codes (NEC).
- **2.1.2** The control cabinet should be mounted outside an equipment building, and the photocell should be mounted vertically on ³/₄" conduit so the photocell is above the control cabinet. Care must be taken to assure that the photocell does not "see" any ambient light that would prevent it from switching into the nightmode.
- **2.1.3** The wiring from the photocell, the service breaker, the red incandescent beacons, and the sidelights should enter the control cabinet through the bottom of the cabinet. Inside the cabinet, the connections will be made on the terminal blocks and circuit breakers located at the bottom of the chassis. These connections are made as follows:

2.2 EXTERNAL PHOTOCELL WIRING

(Refer to Drawing 1288-R)

- **2.2.1** Connect the **<u>BLACK</u>** wire from the photocell to terminal block TB2, marked "L2."
- **2.2.2** Connect the <u>**RED</u>** wire from the photocell to terminal block TB2, marked "SSR."</u>
- **2.2.3** Connect the <u>WHITE</u> wire from the photocell to terminal block TB2, marked "N."

2.3 <u>POWER WIRING</u>

(Refer to Drawing 1288-R)

- **2.3.1** Power wiring to the control cabinet should be in accordance with local methods and National Electrical Codes (NEC).
- **2.3.2** Circuit breaker needs to be rated at 40 amps.
- 2.3.3 Connect incoming 120V AC "Hot #1" to terminal block TB1, marked "L1."

TWR Lighting, Inc. Enlightened Technology®

- 2.3.4 Connect incoming 120V AC "Hot #2" to terminal block TB1, marked "L2."
- 2.3.5 Connect neutral wire(s) to one (1) of the terminal blocks TB1, marked "N."
- **2.3.6** Connect the AC ground to the ground lug located to the left of TB2.

2.4 RED BEACON AND SIDELIGHT WIRING

(Refer to Drawing 1288-R)

- 2.4.1 Connect the **<u>BLACK</u>** wire from beacon #1, to circuit breaker marked "B1."
- 2.4.2 Connect the **<u>BLACK</u>** wire from beacon #2, to circuit breaker marked "B2."
- 2.4.3 Connect the **<u>BLACK</u>** wire from beacon #3, to circuit breaker marked "B3."
- 2.4.4 Connect the <u>**RED**</u> wire from sidelight group, to circuit breaker marked "S."
- **2.4.5** Connect the <u>WHITE</u> neutral wire(s) to one (1) or more of the terminal blocks on TB1, marked "N."
- **2.4.6** Connect the **<u>GREEN</u>** (ground) wires to the ground lugs located to the left of terminal block TB2.

2.5 RED BEACON AND SIDELIGHT ALARM WIRING

(Refer to Drawings 1288-R and 1288-S)

- 2.5.1 Red light failure alarm relays K1 K2, and Modules M2, M4, M6, and M7, are provided for independent contact closures for: Power Failure, Tower Lights "ON," Sidelight Burnout, 1st Beacon Lamp Burnout, 2nd Beacon Lamp Burnout, and 3rd Beacon Lamp Burnout.
- **2.5.2** Alarm wiring: To utilize all of the red light alarms, the customer will need twelve (12) pairs of wires to interface with the alarm device. One (1) wire from each of the twelve (12) pairs will terminate TB5 1, 2, or 3, the points marking common (C). The remaining wire from each pair will terminate as follows:
 - **2.5.2.1** Power Failure Alarm Connect to TB6, terminal #11, for normally open, or terminal #12, for normally closed monitoring.
 - **2.5.2.2** Tower Lights "ON" Connect to TB6, terminal #9, for normally open, or terminal #10, for normally closed monitoring.

TWR Lighting, Inc. Enlightened Technology® A1/3MBNM7W/IND CONTROLLER

- **2.5.2.3** Sidelight Lamp Burnout Connect to TB6, terminal #7, for normally open, or terminal #8, for normally closed monitoring.
- **2.5.2.4** Beacon #1 Lamp Burnout Connect to TB6, terminal #5, for normally open, or terminal #6, for normally closed monitoring.
- **2.5.2.5** Beacon #2 Lamp Burnout Connect to TB6, terminal #3, for normally open, or terminal #4, for normally closed monitoring.
- **2.5.2.6** Beacon #3 Lamp Burnout Connect to TB6, terminal #1, for normally open, or terminal #2, for normally closed monitoring.
- **2.5.3** Testing: To test alarms, follow the procedures using an "ohm" meter between alarm common and alarm points.
 - **Power Failure** Pull circuit breaker at electrical panel.
 - **Lights ''ON''** Operate SW1, or cover the photocell. Indicator PL1 will illuminate **green** at this time.

Beacon and Sidelights Trip circuit breakers on the controller panel. Indicators PL2, or PL3 will illuminate <u>red</u> for each.

TWR Lighting, Inc. Enlightened Technology® A1/3MBNM7W/IND CONTROLLER

3.0 THEORY OF OPERATION

3.1 <u>POWER SUPPLY</u>

120/240V AC enters the controller from the circuit breaker panel. Line L1 and L2 sit at the PRD, waiting to be switched, and also keep the power failure relay K1 energized. When the 86390HL-FAA photocell is activated, line (SSR) energizes the coil of the PRD and K2 "Lights On" relay. This also can be accomplished by using the photocell by-pass switch (SW1). Indicator PL1 will illuminate <u>green</u>.

3.2 <u>SIDELIGHTS</u>

Line LD4 is sent to Module M7, which is the current sensing module for the sidelights. The CM-250 monitors one (1) level of sidelights, and will provide a contact closure along a visual indication if one (1) or more lamps fails. Indicator PL3 will also illuminate <u>red</u>.

3.3 <u>BEACONS</u>

Lines LD1, LD2, and LD3 are sent to Modules M1, M3, and M5. M1 is the primary flasher for beacon #1, which provides control voltage to Modules M3, and M5, which are auxiliary flashers for beacons #2, and #3. The output of Modules M1, M3, and M5 are sent to the primary of boost transformers T1, T2, and T3. The boosted output voltages (126V at 120V nominal input) are then sent through the current sensing Modules M2, M4, and M6, then to the circuit breaker outputs B1, B2, and B3.

If Modules M2, M4, or M6 detect a lamp burnout, then that particular module will provide a contact closure along with a visual indication for that lamp circuit, and also indicator PL2 would illuminate **red**.

TWR Lighting, Inc. Enlightened Technology® A1/3MBNM7W/IND CONTROLLER

4.0 MAINTENANCE GUIDE

4.1 <u>RED OBSTRUCTION LIGHTING</u>

The only required maintenance that needs to be performed is replacement of the lamps in the L-864, and L-810 fixtures. Lamps should be replaced after being operated for not more than 75% of the rated life, or immediately upon failure as per FAA Advisory Circular 70/7460-1K. By following these instructions, maximum safety and performance can be achieved.

TOOLS REQUIRED: NONE

4.2 <u>L-864 LAMP REPLACEMENT</u>

- **4.2.1** Loosen the one (1) wing nut on the latch pin, and allow it to recline.
- **4.2.2** Open the lens, and tilt it backward.
- **4.2.3** To remove each lamp, depress down while rotating the lamp counterclockwise 90 degrees.
- **4.2.4** Install the new lamps by depressing down while rotating the lamp clockwise 90 degrees.
- **4.2.5** Close the lens, and let the latch pin drop in the recessed slot.
- **4.2.6** Tighten the wing nut snug, then 1/4 turn more.

4.3 <u>L-810 LAMP REPLACEMENT</u>

- **4.3.1** Unclasp the two (2) latches, and allow the bail to recline backward.
- **4.3.2** Lift the lens up and over the lamp, allowing the lens to hang from the safety cable.
- **4.3.3** Unscrew the lamp counter-clockwise and remove.
- **4.3.4** Install the new lamp by screwing the lamp clockwise.
- **4.3.5** Re-install the lens making sure it is seated properly on the base.
- **4.3.6** Reclasp the two (2) latches.

4.4 <u>L-864 CONTROLLER</u>

No scheduled maintenance is required. Perform on an as needed basis only.

4.5 <u>PHOTOCELL</u>

The photocell is a sealed unit. No maintenance is needed or required other than replacement as necessary.

TWR Lighting, Inc. Enlightened Technology®

5.0 MAJOR COMPONENTS PARTS LIST

QTY	PART NUMBER	DESCRIPTION
1	86390HL-FAA	120 – 240V Photocell
1	PM17AY	Load Contactor (PRD)
1	PF-250	120 – 240 Solid State Flasher (M1)
2	SF-250	Solid State Auxiliary Flasher (M3 & M5)
1	STH08015	35K ohm 20W resistor (R1)
3	KRPA5AG120V	SPDT Relay (K1 – K3)
3	XFMR-15 amp	Boost Transformers (T1 – T3)
4	S261D20	20 amp Circuit Breaker (B1 – B5)
2	MOV524V15	Varistor (MOV1, MOV2)
9	8WA1204	Terminal Block (TB1 –TB2)
4	CM-250	Sidelight & Beacon Current Sensors (M2, M4, M6, and M7)
3	KRPA11AG120V	DPDT Relay (K4 – K6)
2	TERMBLK141-7	7 Part Terminal Block (TB3 & TB4)
2	GOB3-R23CN34LED	Red LED Indicator NEMA 7 (PL2 & PL3)
1	GOB3-G23CN34LED	Green LED Indicator NEMA 7 (PL1)
1	GO52A3FN34	SPST NEMA7 SWITCH (SW1)
1	CURBLK	3 Part Terminal Block (TB5)
1	TERMBLK141-12	12 Part Terminal Block (TB6)

TWR Lighting, Inc. Enlightened Technology® A1/3MBNM7W/IND CONTROLLER

6.0 <u>RECOMMENDED SPARE PARTS LIST</u>

QTY	PART NUMBER	DESCRIPTION
1	PF-250	120 – 240 Solid State Flasher (M1)
1	CM-250	Sidelight & Beacon Current Sensors (M2, M4, M6, and M7)
1	SF-250	Solid State Auxiliary Flasher (M3 & M5)
1	KRPA5AG120V	SPDT Relay (K1 – K3)
1	KRPA11AG120V	DPDT Relay (K4 – K6)

TWR Lighting, Inc. Enlightened Technology

Warranty & Return Policy

TWR Lighting[®], **Inc.** ("**TWR**[®]") warrants its products (other than "LED Product") against defects in design, material (excluding incandescent bulbs) and workmanship for a period ending on the earlier of two (2) years from the date of shipment or one (1) year from the date of installation.

TWR Lighting®, **Inc.** ("**TWR®**") **warrants its "LED Product"** against defects in design, material and workmanship for a period of five (5) years from the date of shipment. TWR®, at its sole option, will, itself, or through others, repair, replace or refund the purchase price paid for "LED Product" that TWR® verifies as being inoperable due to original design, material or workmanship. All warranty replacement "LED Product" is warranted only for the remainder of the original warranty of the "LED Product" replaced. Replacement "LED Product" will be equivalent in function, but not necessarily identical, to the replaced "LED Product."

TWR Lighting®, **Inc. ("TWR®") warrants its "LED Product"** against light degradation for a period of five (5) years from the date of installation. TWR®, at its sole option, will, itself, or through others, repair, replace or refund the purchase price paid for "LED Product" that TWR® verifies as failing to meet 70% of the minimum intensity requirements as defined in the FAA Advisory Circular 150/5345-43E dated 10/19/95. All warranty replacement "LED Product" is warranted only for the remainder of the original warranty of the "LED Product" replaced. Replacement "LED Product" will be equivalent in function, but not necessarily identical, to the replaced "LED Product."

Replacement parts (other than "LED Product") are warranted for 90 days from the date of shipment. Conditions not covered by this Warranty, or which might void this Warranty are as follows:

- Improper Installation or Operation
- Misuse
- Abuse
- Unauthorized or Improper Repair or Alteration
- Accident or Negligence in Use, Storage, Transportation, or Handling
- Any Acts of God or Nature
- Non-OEM Parts The use of non-OEM parts or modifications to original equipment design will void the manufacturer warranty and could invalidate the assurance of complying with FAA requirements as published in Advisory Circular 150/5345-43.

Field Service – Repairs are warranted for 90 days from the date of service, except where TWR® has made recommendations that were not adhered to that may cause premature failure on previous repairs. Labor, Travel, and Tower Climb are not covered under warranty. Customer shall be obligated to pay for all incurred charges not related to warranty. All warranty repairs are performed by trained TWR® personnel, or dispatched through an extensive network of certified and insured Service Representatives.

M.2013.A1/3MBNM7W/IND NEW 5-29-13



Return Terms – You must first contact our Customer Service Department at 713-973-6905 to acquire a Return Merchandise Authorization (RMA) number in order to return the product(s). Please have the following information available when requesting an RMA number:

- The contact name and phone number of the tower owner
- The contact name and phone number of the contractor
- The site name and number
- The part number(s)
- The serial number(s) (if any)
- A description of the problem
- The billing information
- The Ship To address

This RMA number must be clearly visible on the outside of the box. If the RMA number is not clearly labeled on the outside of the box, your shipment will be refused. Please ensure the material you are returning is packaged carefully. The warranty is null and void if the product(s) are damaged in the return shipment.

All RMAs must be received by TWR LIGHTING[®], INC., 4300 WINDFERN RD #100, HOUSTON TX 77041-8943, within 30 days of issuance.

Upon full compliance with the Return Terms, TWR[®] will replace, repair and return, or credit product(s) returned by the customer. It is TWR[®]'s sole discretion to determine the disposition of the returned item(s).

<u>Replacements</u> – Replacement part(s) will be shipped and billed to the customer for product(s) considered as Warranty, pending return of defective product(s). When available, a certified reconditioned part is shipped as warranty replacement with a Return Merchandise Authorization (RMA) number attached. Upon receipt of returned product(s), inspection, testing, and evaluation will be performed to determine the cause of defect. The customer is then notified of the determination of the testing.

- Product(s) that is deemed defective and/or un-repairable and covered under warranty a credit will be issued to the customer's account.
- Product(s) found to have no defect will be subject to a **\$60.00 per hour testing charge (1 hour minimum), which will be invoiced to the customer**. At this time the customer may decide to have the tested part(s) returned and is responsible for the return charges.
- Product(s) under warranty, which the customer does not wish returned, the customer will be issued a credit against the replacement invoice.



<u>Repair & Return</u> – A Return Merchandise Authorization (RMA) will be issued for all part(s) returned to TWR® for repair. Upon receipt of returned product(s), inspection, testing and evaluation will be performed to determine the cause of defect. The customer is then notified of the determination of the testing. If the returned part(s) is deemed un-repairable, or the returned part(s) is found to have no defect, the customer will be subject to a **\$60.00 per hour testing charge (1 hour minimum), which will be invoiced to the customer**. Should the returned parts be determined to be repairable, a written estimated cost of repair will be sent to the customer for their written approval prior to any work being performed. In order to have the tested part(s) repaired and/or returned, the customer must issue a purchase order and is responsible for the return shipping charges.

<u>**Return to Stock**</u> – Any order that is returned to TWR[®] for part(s) ordered incorrectly by the customer, or unneeded upon receipt, the customer is required to pay a **20% restocking fee**. A credit will be issued once it is determined that the Return Terms are met.

<u>Credits</u> – Credits are issued once it is determined that all of the Warranty and Return Terms are met. All credits are processed on Fridays. In the event a Friday falls on a Holiday, the credit will be issued on the following Friday.

<u>**Freight**</u> – All warranty replacement part(s) will be shipped via ground delivery and paid for by TWR $^{\circ}$. Delivery other than ground is the responsibility of the customer.

REMEDIES UNDER THIS WARRANTY ARE LIMITED TO PROVISIONS OF REPLACEMENT PARTS AND REPAIRS AS SPECIFICALLY PROVIDED. IN NO EVENT SHALL **TWR**® BE LIABLE FOR ANY OTHER LOSSES, DAMAGES, COSTS OR EXPENSES INCURRED BY THE CUSTOMER, INCLUDING, BUT NOT LIMITED TO, LOSS FROM FAILURE OF THE PRODUCT(S) TO OPERATE FOR ANY TIME, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, INCLUDING ALL PERSONAL INJURY OR PROPERTY DAMAGE DUE TO ALLEGED NEGLIGENCE, OR ANY OTHER LEGAL THEORY WHATSOEVER. THIS WARRANTY IS MADE BY **TWR**® EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED. WITHOUT LIMITING THE GENERALITY OF THE FORGOING, **TWR**® MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS OF THE PRODUCT(S) FOR ANY PARTICULAR PURPOSE. **TWR**® EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES.

TWR Lighting, Inc. Enlightened Technology® VICE RETURN MERCHANDISE AUTHORIZATION (RMA) FORM						
RMA#:	DATE:					
CUSTOMER:						
CONTACT:	PHONE NO.:					
ITEM DESCRIPTION (PART N	0.):					
MODEL NO.:	SERIAL NO.:					
ORIGINAL TWR INVOICE NO.	.:DATED:					
DESCRIPTION OF PROBLEM:						
SIGNED:	DATE NEEDED:					
RETURN ADDRESS:						


4300 WINDFERN RD., STE 100 - HOUSTON, TEXAS 77041-8943





RETURN MERCHANDISE AUTHORIZATION (RMA) FORM

RMA#:	_DATE:
CUSTOMER:	
	PHONE NO.:
	.):
	_SERIAL NO.:
ORIGINAL TWR INVOICE NO.:	DATED:
DESCRIPTION OF PROBLEM:	
SIGNED:	DATE NEEDED:

4300 WINDFERN RD., STE 100 - HOUSTON, TEXAS 77041-8943

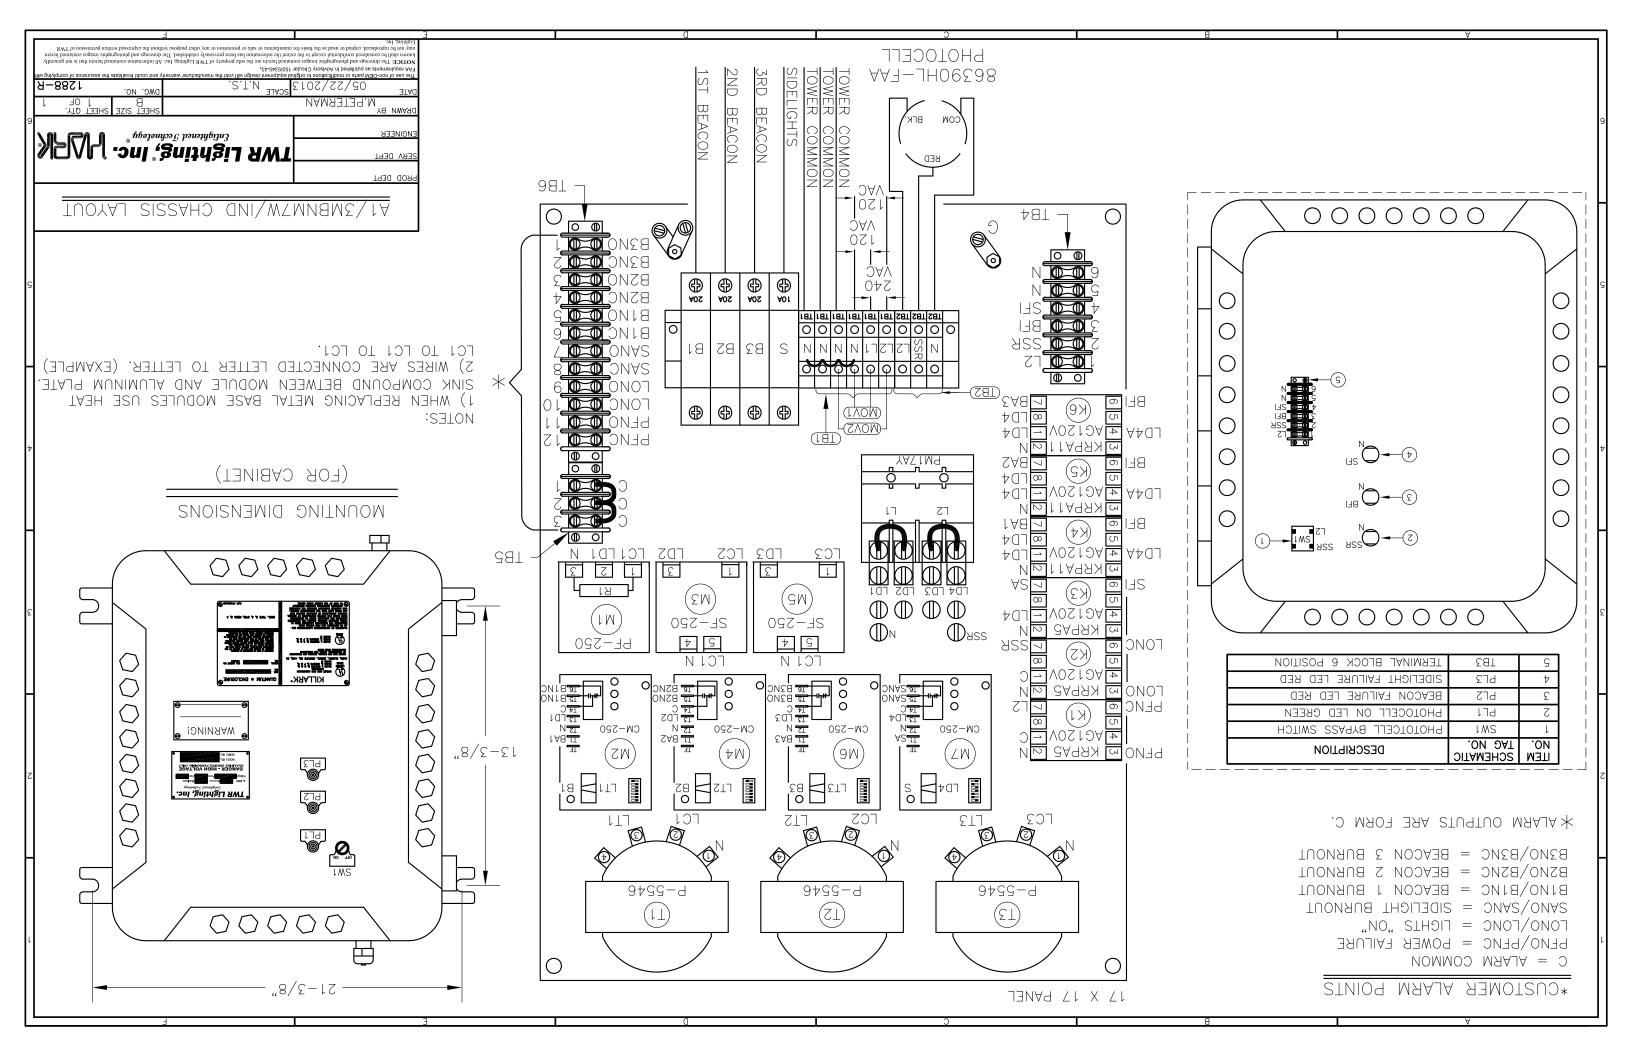

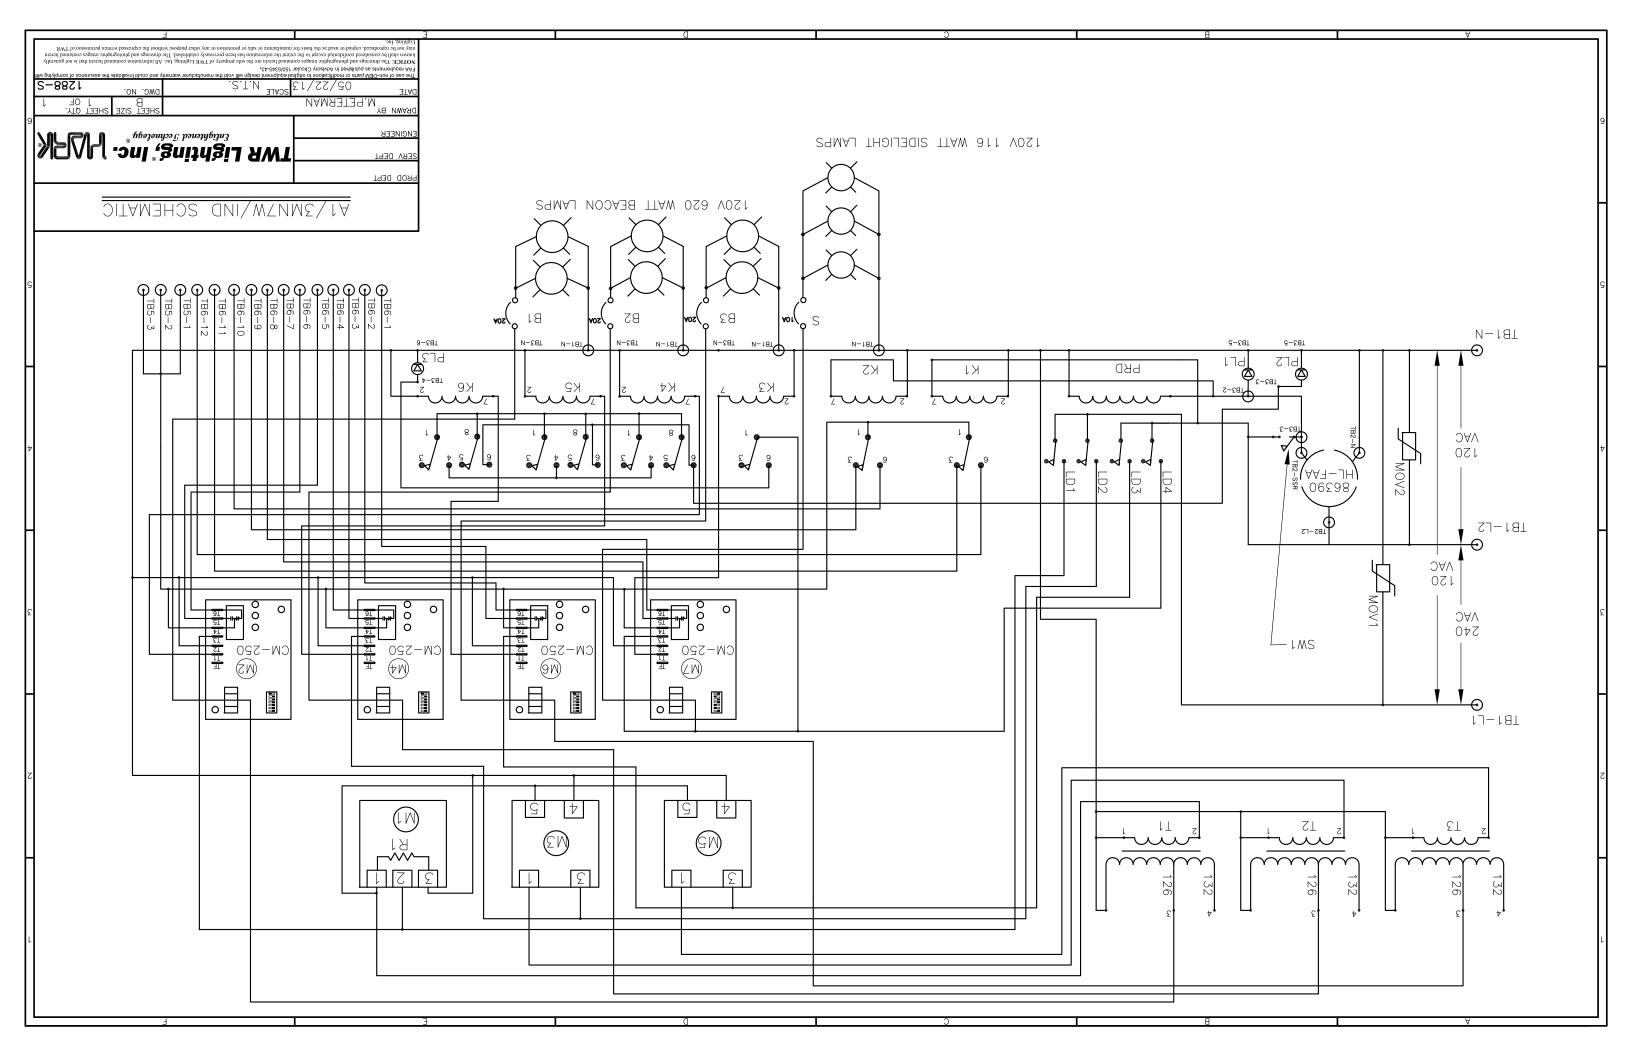


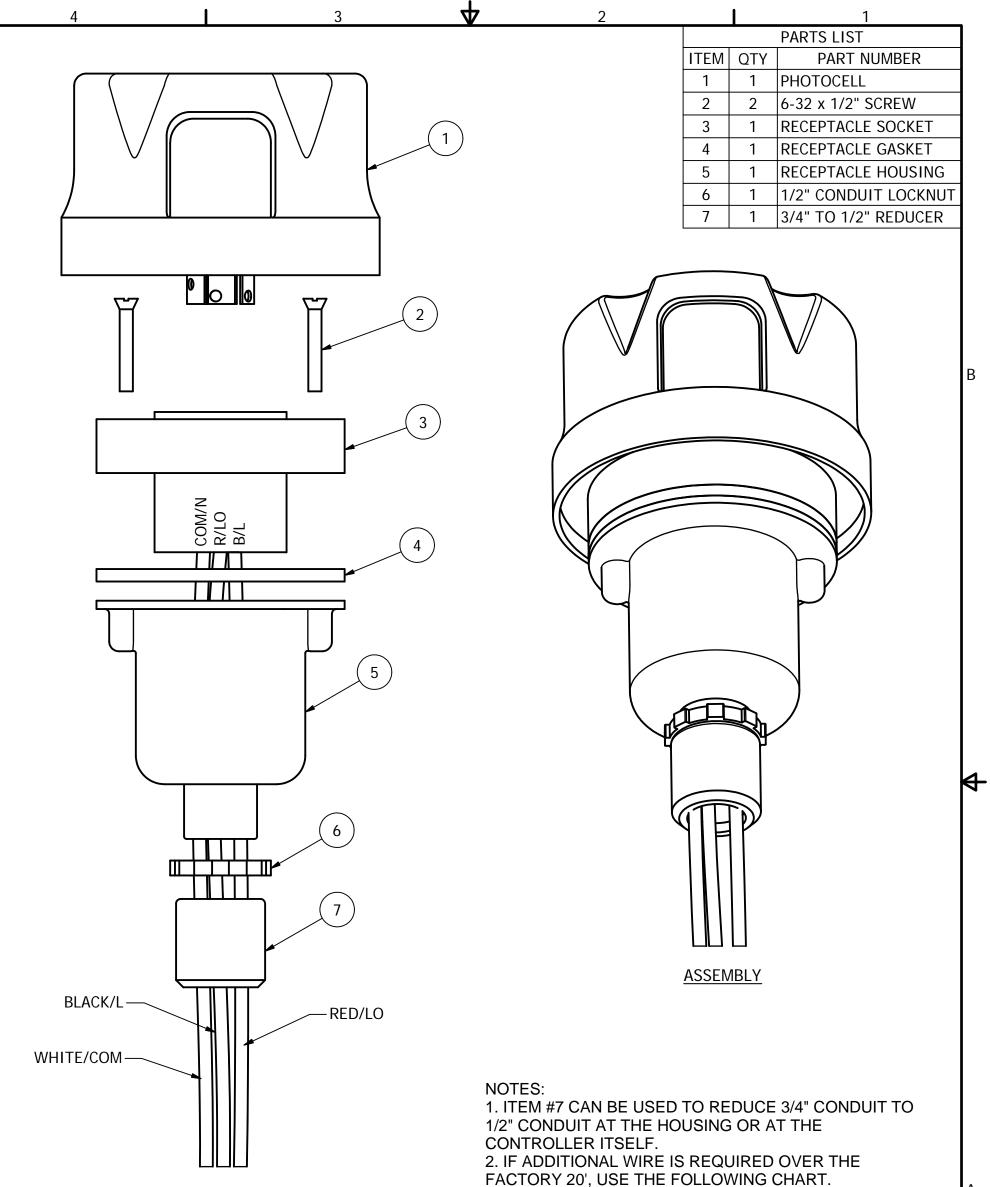


В


₽

EXPLODED VIEWFACTORY 20', USE THE FOLLOWING CHART.
21' TO 300'- 16 AWG TFFN
301' TO 500' - 14 AWG TFFN3. WIRE CONNECTIONS ARE TO BE TINNED AT ITEM 3.

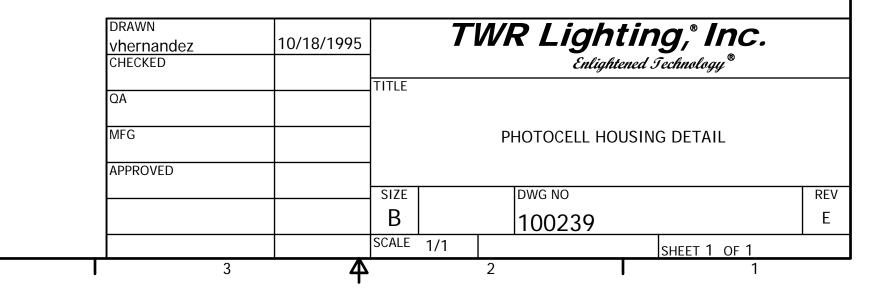


4

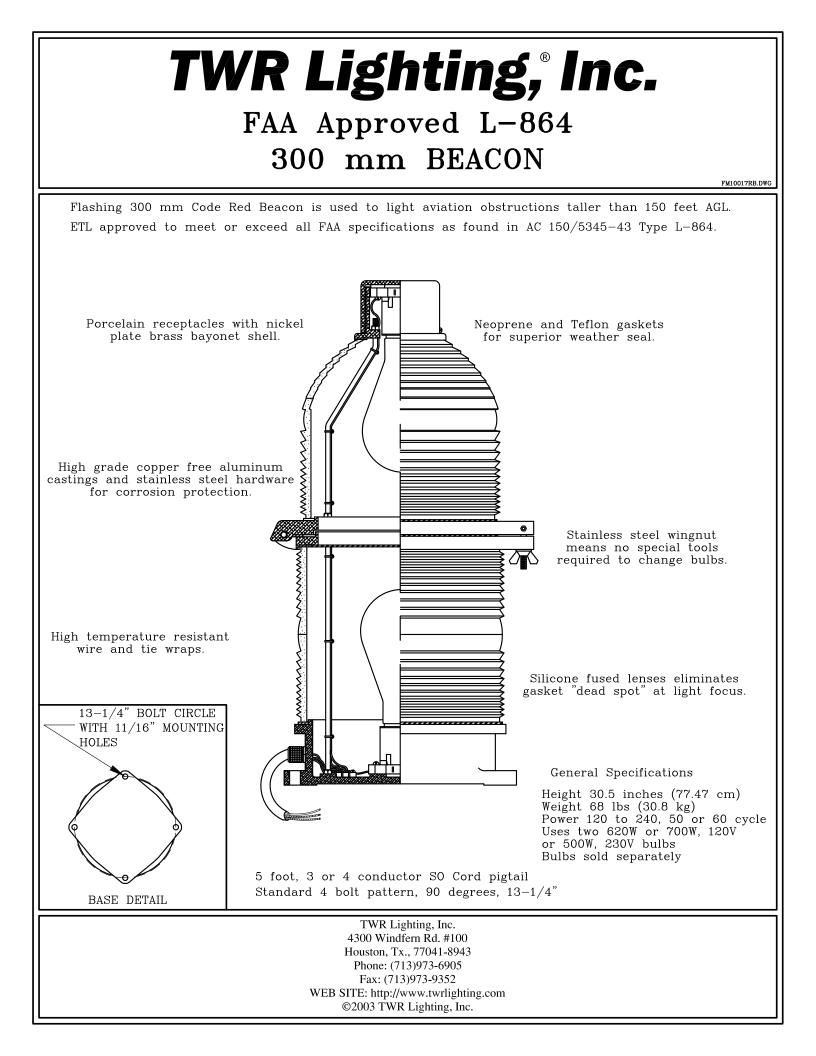

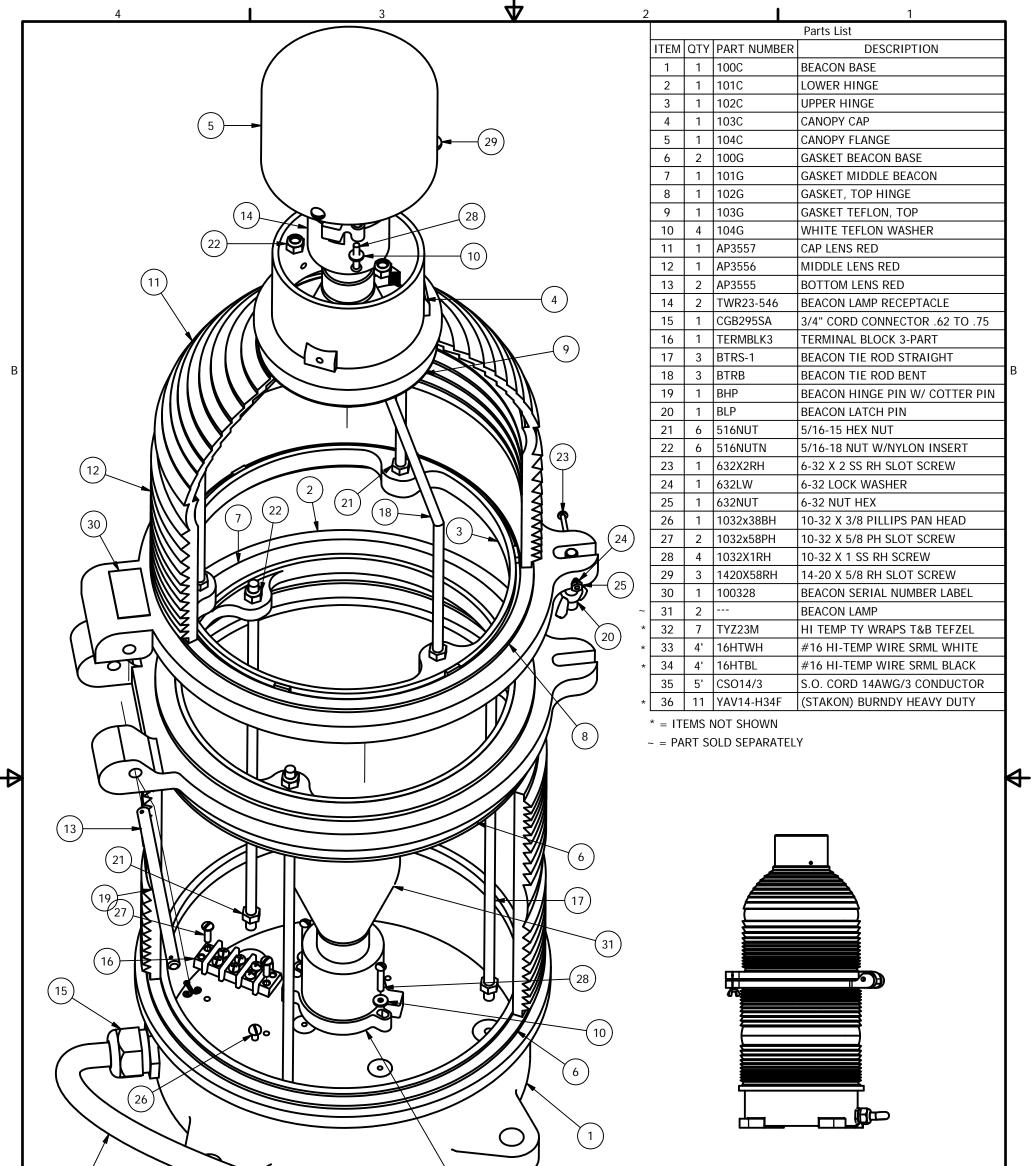


DRAWN J.L.BUSTAMANTE CHECKED QA	11/27/07		ТИ	/ R	Ligh	n tir nlight	1g,[®] Inc. tened Technology [®]	
MFG APPROVED		TITLE			300 MN ASSEMB	/I BEA	CON	
		SIZE B			DWG NO		275-B	rev E
		SCALE					SHEET 1 OF 1	
invalidate the assurance NOTICE: The drawings and pho known shall be considered confi	of complying w otographic images con idential except to the e	ith FAA re tained herein extent the info	equirements are the sole p ormation has b	as pub roperty of ' een previo	olished in Ad TWR Lighting, I usly established.	visory C Inc. All info The drawi	manufacturer warranty and ircular 150/5345–43. ormation contained herein that is not ings and photographic images contair the expressed written permission of T	generally ed hereir
4		2			I		1	


Α

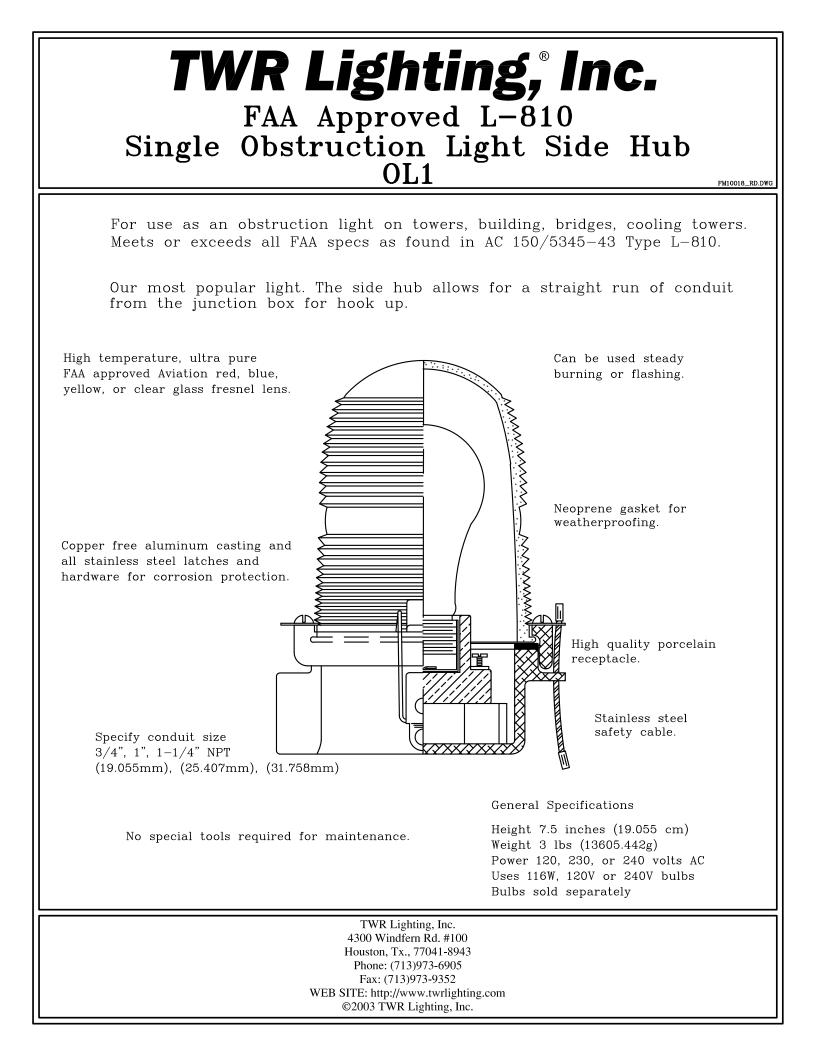

	stablished. The drawings and photographic images contained h Mort Purpose without the expressed written permission of TVF.	the basis for manufacture or sale or promotion or any of	may not be reproduced confidential as may not be reproduced, copied or used as Lighting, Inc.	3		NOIS	<u> </u>	
crally	icturer warranty and could Invalidate the assurance of comp. . Lighting, Inc. All information contained herein that is not gent displicible. The deswings and aboregraphic images contained b	ory Circular 150/5345-43. c images contained herein are the sole property of TWR	FAA requirements as published in Adving MOTICE: The drawings and photographi			B.0.1		лы
-0ר	 ВВОЕ	2/92 _{acare} Enfl	ZAJAS.A.3 \r \r					
٢	SHEET SIZE SHEET OLY.		ла имаяо					
	[®] hbojonyəə [; pənətybijn		ENCINEER	1				
J	onl "Znithz	עאַ ר <u>י</u> ן אאד⊢	SEBN DEPT	<u>.</u>				
		<u> </u>		1				
	DE HOB	,						
			-	J				
			.NOITAJI					
	MEET YOUR	1 THE SAULTHE 1 AVAILABLE TO 1	NA CAMPS ARI	OTHE	·L			
	UNVI SILCV91	NUT LICEC THE 1						
				•	NOTE			
				•	NOTE			
				•	NOTE			
					NOTE			
		.ELY	ИМОНС IC	S ТЯ,	∀∃=~			
	(.qYI) qr		NMOHS LC	S ТЯ,	∀d=~]~~		
		OL-1 SERIAL NU T16W-120V LAN ELY	STISAƏII NWOHS TO	S ТЯ,	∀∃=~	1		
	JABER LABEL	MAJ VO21-W011	NMOHS LC	S ТЯ,	9↑ ∂91]~		
	TOLS HR LABEL	0L-1 SERIAL NU MAJ VOS1-WƏII	722001 STISA311 NWOHS TC	1 7 8 T N(7	<u>∂</u> 149=* 49=~	~ *		
	RAHER S.S. RH SLOT ABEL ABEL	8-32 X 3/4" S 0L-1 SERIAL NU	H945X328 100327 2115A911 NWOH2 TC	2 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	41 21 49=× 49=∽	* * ~		
	лоскиит אפאבת נ.S. RH SLOT סכנאועד אפרע באפבר	WHITE TEFLON W 0L-1 SERIAL NU 116W-120V LAM	104C 104C	2 2 2 2 2 2	21 21 21 21 21 21 21 21 21 21 21 21 21 2	* * *		
	S ASHER ASHER S.S. RH SLOT S.S. S.S. S.S. S.S. S.S. S.S. S.S. S.S	3/4" CONDUIT L 3/4" CONDUIT L	A314 1046 832X34PH 700327 700327 700400000000	1 2 1 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7	21 21 21 34 36 36 36 36 36 36 36 36 36 36 36 36 36	2 * * *		
	S ASHER ASHER S.S. RH SLOT S.S. S.S. S.S. S.S. S.S. S.S. S.S. S.S	1/8 POP RIVETS 3/4" CONDUIT L 8-32 X 3/4" S 8-32 X 3/4" S 9116W-120V LAM	18PRSS A314 1046 832X34PH 100327 716A21TS 716A21TS 7001	1 2 1 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7	11 11 11 11 11 11 12 12 12 12 12 12 12 1	2 * * *		
	S ASHER ASHER S.S. RH SLOT S.S. S.S. S.S. S.S. S.S. S.S. S.S. S.S	SIDELIGHT RECEP 3/4" CONDUIT L WHITE TEFLON M 8-32 X 3/4" S 8-32 X 3/4" S 8-32 X 3/4" S 8-32 X 3/4" S 8-32 X 3/4" S 9/116W-120V LAW 9/116W-120V LAW	19062 19062 100327 1046 1046 1046 1046 1046	1 2 1 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7	01 01 01 01 01 01 01 01 01 01	2 * * *		
	DTACLE COCKNUT ABSHER S.S. RH SLOT COCKNUT	0L GASKET 3/4" CONDUIT L 8-32 X 3/4" S 8-32	0LC 0LC 0LC 0DC 0DC 0DC 0DC 0DC 0DC 0DC 0DC 0DC 0D	1 2 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7	9 01 16 74 74 75 75 75 75 75 75 75 75 75 75 75 75 75	2 * * *		
	НЕS S. WIRE DOCKNUT ABBER APSHER ASS. RH SLOT COCKNUT ABBER ABBER ABBER ABBER ABBER ABBER ABBER ABBER	SIDELIGHT LATCH 1/16 7 X 7 5.5 STAKON CRIMP 0L GASKET 3/4" CONDUIT L WHITE TEFLON M 8–32 X 3/4" S 8–32 X 3/4" S 8–	A1A 0LC 19062 832X34PH 104C 832X34PH 104C 832X34PH 104C 104C 104C 104C 104C 104C 104C 104C	2 S S S S S S S S S S S S S S S S S S S	<pre>6</pre>	2 * * *		
	НЕS S. WIRE DOCKNUT ABBER APSHER ASS. RH SLOT COCKNUT ABBER ABBER ABBER ABBER ABBER ABBER ABBER ABBER	8-32 X 1/4" P SIDELIGHT LATCH 1/16 7 X 7 5.5 STAKON CRIMP 0L GASKET 3/4" CONDUIT L 3/4" CONDUIT L 3/4" CONDUIT L 3/4" SERIAL NU 8-32 X 3/4" S 8-32 X 3/4" S	01 SHOWN 100327 832X34PH 1046 1046 1046 1046 1046 1046 1046 1046	S I N(3 S I N(3 S I N) 3 S I N 3 S I	6 2 3 4 3 4 3 5 1 2 2 1 2 2 1 2 2 2 2 2 2 2 2 2 2 2 2 2	2 * * *		
	рН S.S. SLOT S. WIRE S. WIRE S. WIRE S. WIRE S. WIRE S. MIRE S. MIRE S. MIRE S. MIRE S. MIRE S. MIRE S. MIRE S. MIRE S. MIRE S. SLOT S. SLOT	0L LENS CLIP 0L LENS CLIP 0L-1 SERIAL NU 0L-1 SERIAL NU 0L GASKET 3/4" CONDUIT L 0L GASKET 3/4" CONDUIT L 0L GASKET 3/4" ST 0L CASKET 0L CASKE	01 SHOWN 100327 832X34PH 1046 1046 1046 19062 7X755 714 19062 7214 19062 7214 7025 7275 7275 7275 7275 7275 7275 7275	2 S S S S S S S S S S S S S S S S S S S	→=PA 3 = PA 3 = PA 1 5 1 5 1 2 1 2 1 3 1 3 1 3 1 3 1 3 1 3 1 3 1 3	2 * * *		
	NMBER LABEL IES OCKNUT PASHER PASHER PASHER INSCLE PASHER PASHA PASHER P	116W-120V LAN 0L LENS CLIP 3/4" CONDUIT L	106C 12 SHOWN 100327 832X34PH 104C 104C 104C 104C 104C 1062 1062 1062 1062 1062 1062 1062 1062	S I N(3 S I N(3 S I N) 3 S I N 3 S I	2 2 3 4 3 4 5 1 2 1 2 1 2 1 2 1 2 2 2 2 2 2 2 2 2 2 2 2 2	2 * * *		
	NWBEK ГАВЕГ NASHER NASHER COCKNUT S S S S NIRE HES H S.S. SLOT ING T BODY	SINGLE SIDELICH 116W-120V LAM 0L LENS CLIP 3/4" CONDUIT L 3/4" CONDUIT L 3/4" CONDUIT L 1/16 7 X 7 5.5 3/4" CONDUIT L 1/16 POP RIVETS 3/4" CONDUIT L 1/16 POP RIVETS 3/4" CONDUIT L 1/16 POP RIVETS 1/16 POP RIVETS 1	105C 105C 105C 100527 104C 104C 104C 104C 104C 104C 104C 104C	1 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	→=PA 3 = PA 3 = PA	2 * * *		
	NWBEK ГАВЕГ NASHER NASHER COCKNUT S S S S NIRE HES H S.S. SLOT ING T BODY	116W-120V LAN 0L LENS CLIP 3/4" CONDUIT L	106C 12 SHOWN 100327 832X34PH 104C 104C 104C 104C 104C 1062 1062 1062 1062 1062 1062 1062 1062	2 3 3 3 4 1 1 1 1 2 1 1 2 1 1 2 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 2 2 1	2 2 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	2 * * *		


. LTR.

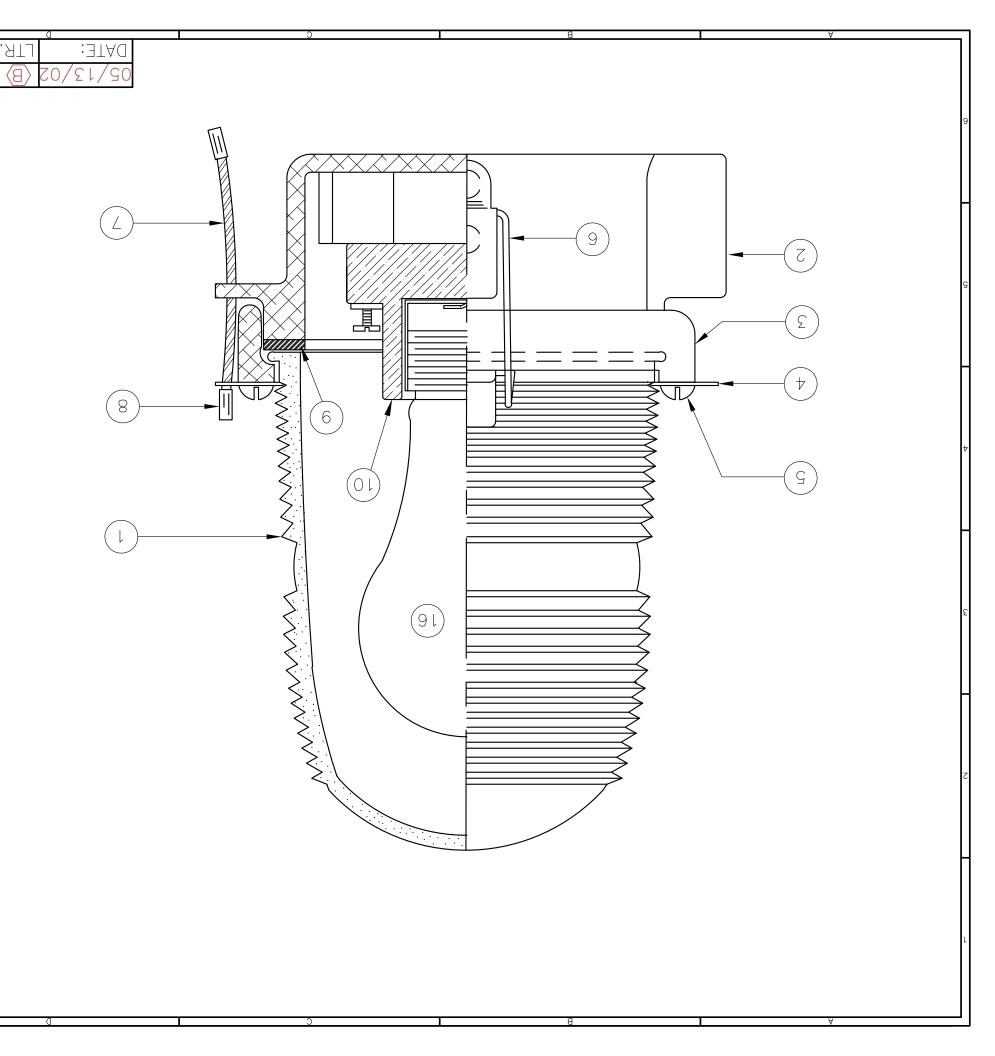

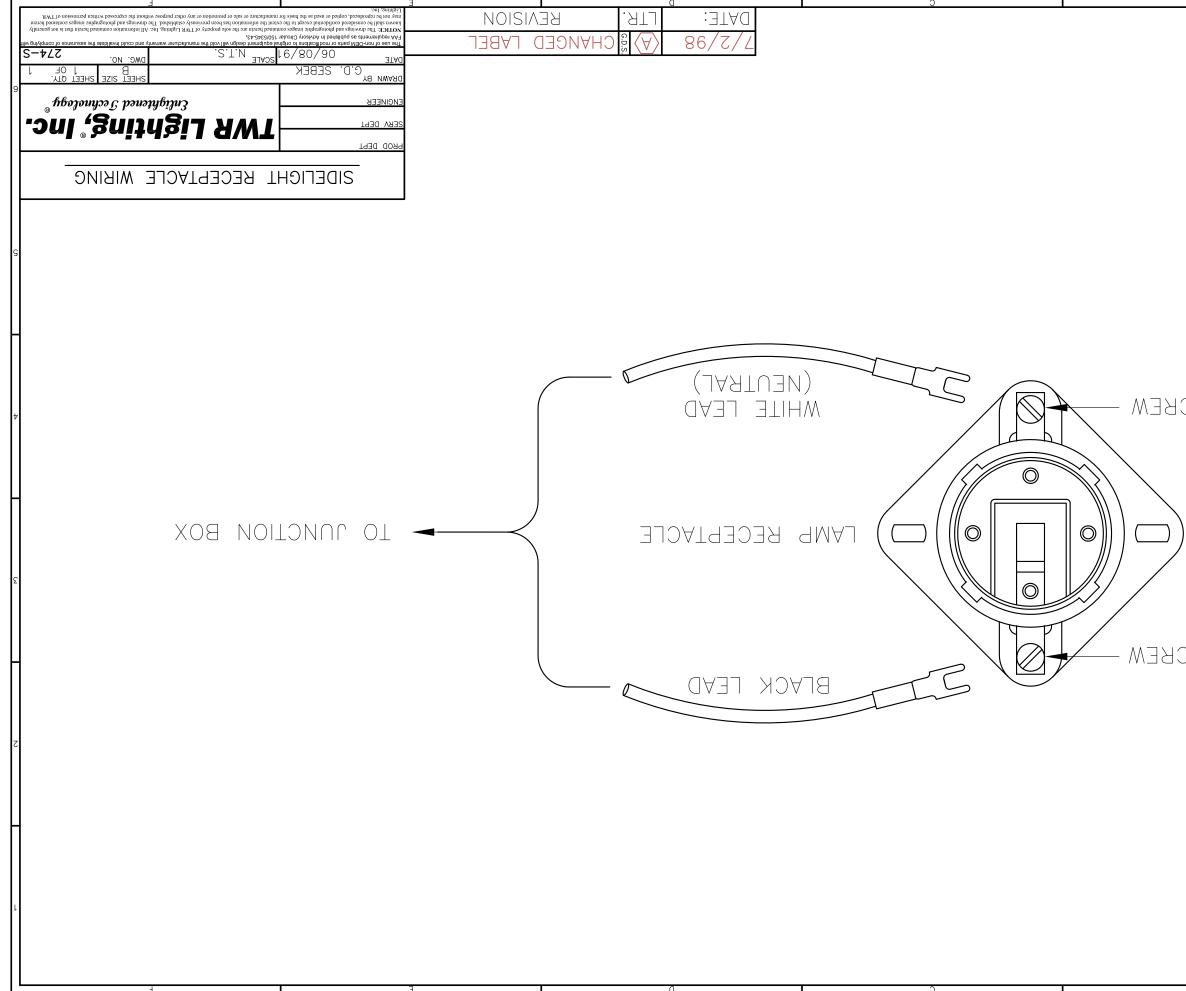

SILVER SCREW -

COLD SCREW-

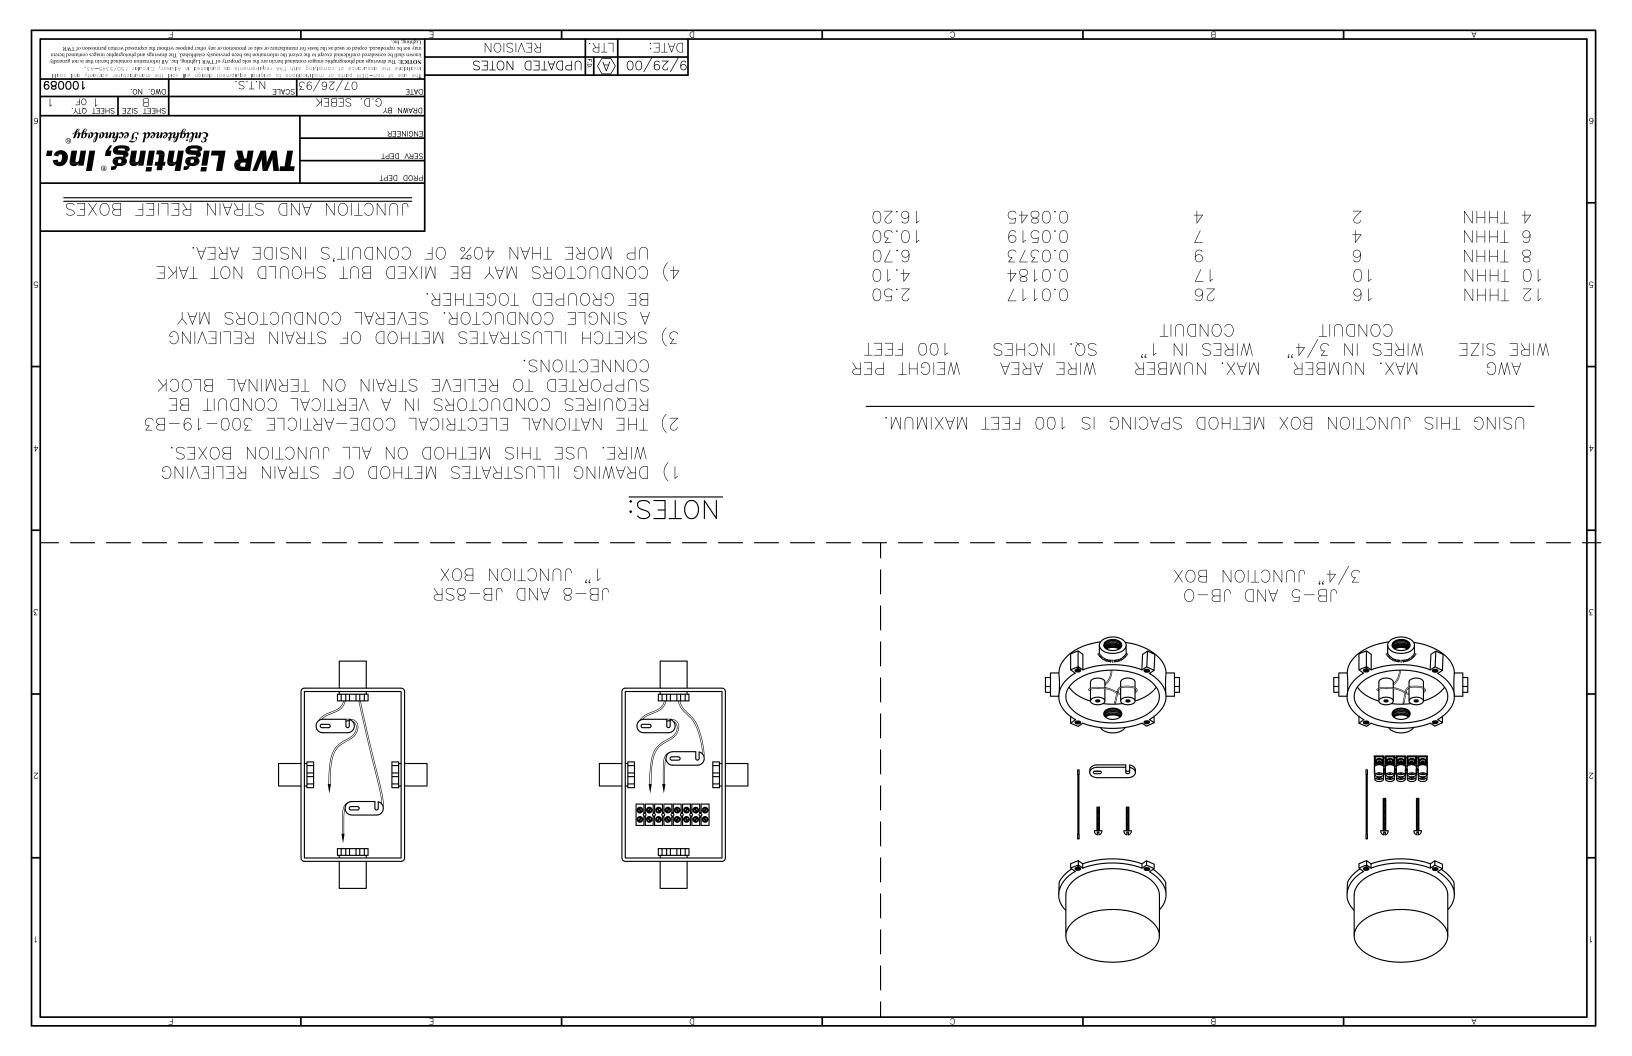

A A <th>JANIMAJT = 8</th> <th></th>	JANIMAJT = 8	
ENGINEER ENGINEER M/3-BEACONS AT TOP (3 OL-1) ENGINITING KIT ENGINITING KIT ENGINITINA ENGINITING KIT ENGINITINA ENGIN		
S		PROVIDED BY OTHER
*		
٤		BROVIDED BY OTHER
11 – 151HHURED #12 11 – 151HHURED #12 11 – 121HHUREC #8 11 – 121HHUREK #8 11HHUREK #12 11 – 121HHUREK #8 11HHUREK 11 – 11 – 121HHUREK #8 11HHUREK 11 – 12 11 – 12 11 – 12 11 – 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 11 – 12 <t< th=""><th></th><th>IOMEE HI</th></t<>		IOMEE HI
ITEM QTY. TWR PART NO. 1 3 BEACON 500 MM BEACON RED 1 3 BEACON 500 MM BEACON RED 2 6 620PS40P 620 WATT 120 VOLT LAMP 2 3 OL1 3/4" OBSTRUCTION LIGHT 4 3 116A21TS 116 WATT 120 VOLT LAMP 5 1 A1/5MBUM7W/IND 8/4" OBSTRUCTION LIGHT 1 6 1 A1 ARE 116HT 1 7 3 OL1 3/4" OBSTRUCTION LIGHT 1 6 1 A1 ARE 1 1 7 3 OL1 3/4" OBSTRUCTION LIGHT 1 6 1 A1/5MBUM7W/IND 116 MAT 7 7 3 OL1 3/4" OBSTRUCTION LIGHT 1 8 ANNILABLE UP 7 3 1 7 1 ARE AND 7 1 1 8 1 A1/5MBUM7W/IND AND 7 1 1		
BILL OF MATERIALS	C D	В

